



TIME WARNER  
INTERACTIVE

**WORLD TOUR**  
**HOOP IT UP**  
**3 ON 3**





**OPERATOR'S MANUAL**







TIME WARNER  
INTERACTIVE™

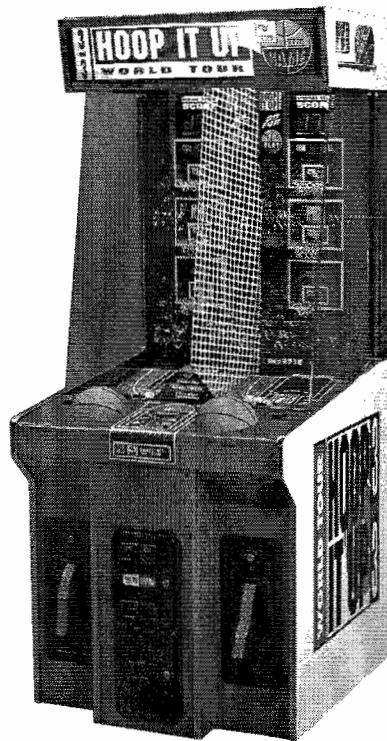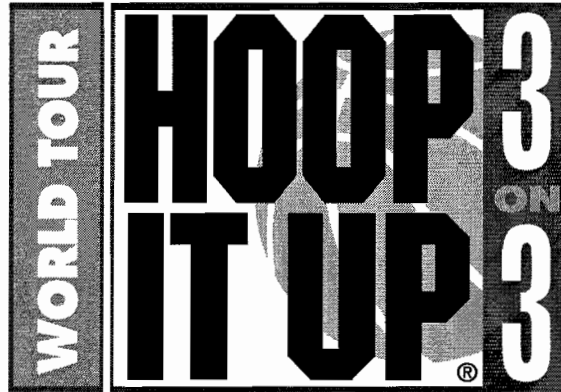

# OPERATOR'S MANUAL

® Hoop It Up is the registered trademark of Streetball Sports Ventures Partners.  
Licensed to Atari Games Corporation/Time Warner Interactive.

## COPYRIGHT NOTICE

**Copyright © 1995 by Atari Games Corporation/Time Warner Interactive. All rights reserved.**

No part of this publication may be reproduced by any mechanical, photographic or electronic process, or in the form of a phonographic recording, nor may it be stored in a retrieval system, transmitted, or otherwise copied for public or private use, without permission from the publisher.

The game play, all graphic designs, this technical manual, its accompanying schematic diagrams, and the display manual are protected by the U.S. Copyright Act of 1976.

This Act provides for substantial penalties for violating federal copyright laws. Courts can impound infringing articles while legal action is pending. If infringers are convicted, courts can order destruction of the infringing articles.

In addition, the Act provides for payment of statutory damages of up to \$50,000 per infringing transaction in certain cases. Infringers may also have to pay costs and attorneys' fees and face an imprisonment of up to five years as well as fines of up to \$250,000 in the case of individuals and up to \$500,000 in the case of corporations.


Atari Games Corporation/Time Warner Interactive will aggressively enforce its copyrights against infringers. We will use all legal means to immediately halt any manufacture, distribution, or operation of a copy of games made by us. Anyone who purchases such copies risks forfeiting such a game.

Published by:  
Atari Games Corporation/Time Warner Interactive  
675 Sycamore Drive  
Milpitas, California 95035

Printed in the U.S.A. 7/95

Produced by the Time Warner Interactive Technical Publications Department.

Design, Writing and Editing: Andrea Dencker  
Technical Illustrations: John Pastrikas and Maylan Wong

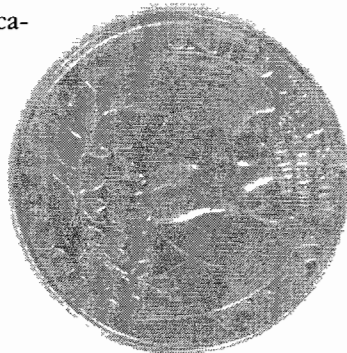

## NOTICE REGARDING NON-TWI PARTS

### WARNING

*Use of non-TWi parts or modifications of any Time Warner Interactive game circuitry may adversely affect the safety of your game, and may cause injury to you and your players.*

You may void the game warranty (printed on the inside back cover of this manual) if you do any of the following:

- Substitute non-Time Warner Interactive (TWi) parts in the game.
- Modify or alter any circuits in the game by using kits or parts *not* supplied by Time Warner Interactive.

## FCC COMPLIANCE

This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instruction manual, may cause interference to radio communications. It has been tested and found to comply with the limits for a Class A computing device pursuant to Subpart J of Part 15 of Federal Communications Commission (FCC) Rules, which are designed to provide reasonable protection against such interference when operated in a commercial environment. Operation of this equipment in a residential area or modification to this equipment is likely to cause interference, in which case the user, at his own expense, will be required to take whatever measures may be required to correct the interference. If you suspect interference from a Time Warner Interactive game at your location, check the following:

- All ground wires in the game are properly connected as shown in the game wiring diagram.
- The power cord is properly plugged into a grounded three-wire outlet.
- On games provided with an Electromagnetic Interference (EMI) ground plane, be sure that the game printed-circuit boards (PCBs) are properly installed on the EMI ground plane and that the end board is securely installed with **all** screws in place and tightened.

If you are still unable to solve the interference problem, please contact Customer Service at Time Warner Interactive. See the inside front cover of this manual for service in your area.

## S A F E T Y   S U M M A R Y

*The following safety precautions apply to all game operators and service personnel. Specific warnings and cautions will be found in this manual whenever they apply.*

### WARNING

**Properly Ground the Game.** Players may receive an electrical shock if this game is not properly grounded! To avoid electrical shock, do not plug in the game until it has been inspected and properly grounded. This game should only be plugged into a grounded three-wire outlet. If you have only a two-wire outlet, we recommend you hire a licensed electrician to install a three-wire grounded outlet.

**AC Power Connection.** Before you plug in the game, be sure that the game's power supply can accept the AC line voltage in your location. The line voltage requirements are listed in Chapter 1 of this manual.

**Disconnect Power During Repairs.** To avoid electrical shock, disconnect the game from the AC power before removing or repairing any part of the game.

**Use Only Time Warner Interactive (TWi) Parts.** To maintain the safety of your TWi game, use only TWi parts when you repair it. Using non-TWi parts or modifying the game circuitry may be dangerous, and could injure you and your players.

**Use the Proper Fuses.** To avoid electrical shock, use replacement fuses which are specified in the parts list for this game. Replacement fuses must match those replaced in fuse type, voltage rating, and current rating. In addition, the fuse cover must be in place during game operation.

### CAUTION

**Properly Attach All Connectors.** Make sure that the connectors on each printed circuit board (PCB) are properly plugged in. The connectors are keyed to fit only one way. If they do not slip on easily, do not force them. If you reverse a connector, it may damage your game and void your warranty.

**Ensure the Proper AC Line Frequency.** Games manufactured for operation on 60 Hz line power (used in the United States) must not be operated in countries with 50 Hz line power (used in Europe). If a 60 Hz machine operates on 50 Hz line power, the fluorescent line ballast transformer will overheat and cause a potential fire hazard. Check the product identification label on your machine for the line frequency required.

### ABOUT NOTES, CAUTIONS, AND WARNINGS

In TWi publications, notes, cautions and warnings have the following meaning:

**NOTE** — A highlighted piece of information.

**CAUTION** — Equipment and/or parts can be damaged or destroyed if instructions are not followed. You will void the warranty on TWi printed-circuit boards and parts thereon, if equipment or parts are damaged or destroyed due to failure of following instructions.

**WARNING** — Players and/or technicians can be killed or injured if instructions are not followed.

### Précautions de'Emploi Générales

## PRÉCAUTIONS DE 'EMPLOI GÉNÉRALES

*Les précautions d'emploi ci-dessous s'adressent à toutes les personnes susceptibles d'utiliser ou de réparer ce jeu. La présente notice renferme également d'autres mises en garde et avertissements spécifiques.*

### MISES EN GARDE

**Mettez le jeu à la terre.** Les joueurs risquent de recevoir une décharge électrique si le jeu n'est pas correctement mis à la terre! Pour éviter les décharges électriques, assurez-vous que le jeu est correctement mis à la terre avant de le brancher. Branchez-le uniquement dans une prise tripolaire avec mise à la terre. Si vous n'avez pas de prise tripolaire, il est recommandé de faire appel à un électricien breveté pour en installer une. Si la console de commande n'est pas correctement mise à la terre, les joueurs risquent de recevoir une décharge électrique! Si une réparation quelconque a été faite sur la console de commande, assurez-vous que le fil de mise à la terre est solidement attaché à l'intérieur de la console. Ceci fait, verrouillez le jeu.

**Branchement sur secteur.** Avant de brancher le jeu, assurez-vous que son bloc d'alimentation est compatible avec la tension secteur locale. Les conditions d'alimentation du jeu apparaissent au premier chapitre de la présente notice.

**Débranchez le jeu du secteur avant toute réparation.** Pour éviter les décharges électriques, débranchez le jeu du secteur avant de le démonter ou de le réparer.

**Utilisez uniquement des pièces TWi.** Pour éviter les risques d'accidents, utilisez toujours des pièces TWi pour réparer le jeu. L'emploi de pièces d'autres marques ou la modification des circuits du jeu sont potentiellement dangereux pour le réparateur et pour les joueurs.

**Utilisez les fusibles appropriés.** Pour éviter les décharges électriques, remplacez les fusibles par ceux indiqués dans la nomenclature du jeu. Les fusibles de rechange doivent être du même type, de la même tension et de la même intensité que ceux d'origine.

### ATTENTION

**Attachez correctement tous les connecteurs.** Assurez-vous que tous les connecteurs sont bien enfichés dans les cartes circuits. Ces connecteurs sont dotés d'un détrompeur qui évite les erreurs de branchement. S'ils s'enfichent difficilement, ne forcez pas. Si vous branchez un connecteur à l'envers, vous risquez d'endommager le jeu et d'en annuler la garantie.

**Vérifiez la fréquence de ligne du courant secteur.** Les jeux fabriqués pour fonctionner à une fréquence de ligne de 60 Hz (fréquence utilisée en Amérique du Nord) ne doivent pas être utilisés dans les pays dont le courant a une fréquence de 50 Hz (Europe). Si vous branchez un appareil conçu pour une fréquence de 60 Hz sur un courant d'une fréquence de 50 Hz, le transformateur ballast de l'éclairage fluorescent surchauffera, ce qui présente des risques d'incendie. Vérifiez la fréquence de ligne requise par votre machine; elle est indiquée sur sa plaque signalétique.

### REMARQUES, AVERTISSEMENTS ET MISES EN GARDE

Dans les publications d'TWi, les conventions, en ce qui concerne les remarques, avertissements et mises en garde, sont les suivantes:

**REMARQUE** — Sert à attirer l'attention sur un point particulier.

**AVERTISSEMENT** — Le non-respect des directives présente des risques d'endommagement et/ou de destruction pour le matériel et/ou les pièces. En cas d'endommagement ou de destruction du matériel ou des pièces, résultant du non-respect des directives, la garantie offerte sur les cartes circuits TWi et les pièces connexes TWi sera annulée.

**MISE EN GARDE** — Le non-respect des directives présente des risques de blessures ou d'accidents mortels pour les joueurs et/ou les réparateurs.

# CONTENTS

## 1 Set-Up

How to Use This Manual . . . . .	1-1
Operating the Game . . . . .	1-2
Installation . . . . .	1-2
Install the Playfield Balls . . . . .	1-2
Load the Ticket Dispensers . . . . .	1-2
Level the Game . . . . .	1-2
Change the Bonus Tickets Sign (Optional) . . . . .	1-2
Special Precautions . . . . .	1-2
Inspecting the Game . . . . .	1-3
Controls and Switch Locations . . . . .	1-3
Power On/Off Switch and Main Fuse . . . . .	1-3
Ticket Dispensers . . . . .	1-3
Liquid-Crystal Display and Keypad . . . . .	1-4
Adjust Contrast of LCD . . . . .	1-4
Volume Control . . . . .	1-4
Balance . . . . .	1-4
Ticket Counter . . . . .	1-4
Coin Counter . . . . .	1-4
Setting the Coin, Ticket and Game Options . . . . .	1-5
Game Play . . . . .	1-5
Introduction . . . . .	1-5
Game Play Hints . . . . .	1-5
Game Play . . . . .	1-5
Advanced Game Mode . . . . .	1-5

## 2 Test Functions

Introduction . . . . .	2-1
Using the Liquid-Crystal Display on the Game PCB . . . . .	2-2
Attract-Mode (Accounting) Functions . . . . .	2-2
Program Modes . . . . .	2-2
Set Parameters Mode . . . . .	2-2
Set Cost \$/Game . . . . .	2-4
Test Functions . . . . .	2-4
Display Memory . . . . .	2-4

## 3 Troubleshooting & Maintenance

Introduction . . . . .	3-1
Maintenance Procedures . . . . .	3-2
Introduction . . . . .	3-2
Cleaning Procedure for Coin Mechanisms . . . . .	3-3
Cleaning Procedure for Ticket Dispensers . . . . .	3-3
Cleaning Procedure for Ball Shooter . . . . .	3-3
Troubleshooting Procedures . . . . .	3-3
Repair Procedures . . . . .	3-4
Introduction . . . . .	3-4
Ball Shooter Spring and Piston . . . . .	3-4
Replacing the Ball Shooter Motor or Optics . . . . .	3-4
Ball Shooter Right/Left Tilt Adjustment . . . . .	3-5
Basketball Control . . . . .	3-5
Speaker . . . . .	3-5
Attraction Panel Fluorescent Light . . . . .	3-5
Playfield Incandescent Lights . . . . .	3-5
Backboard and Playfield Components . . . . .	3-6
System Logic Assemblies . . . . .	3-6

## 4 Parts Illustrations

Part Ordering Information . . . . .	4-1
-------------------------------------	-----

For figure and page numbers, see the list of illustrations that follows.

## 5 Wiring Diagrams

Introduction . . . . .	5-1
------------------------	-----

For figure and page numbers, see the list of illustrations that follows.

## Warranty

Inside back cover

# ILLUSTRATIONS

Figure 1-1 Operator Controls on Hoop It Up Game PCB . . . . . 1-4

Figure 2-1 Detailed View of Keypad. . . . . 2-2

Figure 3-1 Ball Shooter Adjustment . . . . . 3-4

Figure 4-1 Cabinet-Mounted Assemblies, Front View . . . . . 4-2

Figure 4-2 Cabinet-Mounted Assemblies, Rear View . . . . . 4-3

Figure 4-3 Backboard Assembly . . . . . 4-4

Figure 4-4 Control Panel Assembly. . . . . 4-5

Figure 4-5 Bellows (Basketball) Control Assembly . . . . . 4-6

Figure 4-6 Ball Shooter Assembly. . . . . 4-7

Figure 4-7 Over/Under Coin Door Assembly. . . . . 4-8

Figure 4-8 Power Supply Assembly . . . . . 4-10

Figure 5-1 Hoop It Up Game Wiring Diagram . . . . . 5-2

Figure 5-2 Score Board PCB Schematic Diagram. . . . . 5-4

*NOTE: The Hoop It Up Game PCB schematic diagram is not published in this manual. However, it is available free of charge by calling or writing to Time Warner Interactive Customer Service. See the inside front cover for our address and telephone numbers.*


# TABLES

Table 1-1 Game Specifications . . . . . 1-3

Table 2-1 Summary of Accounting Functions. . . . . 2-2

Table 2-2 Summary of Recommended Settings for All Parameters . . . . . 2-3

Table 3-1 General Troubleshooting . . . . . 3-2

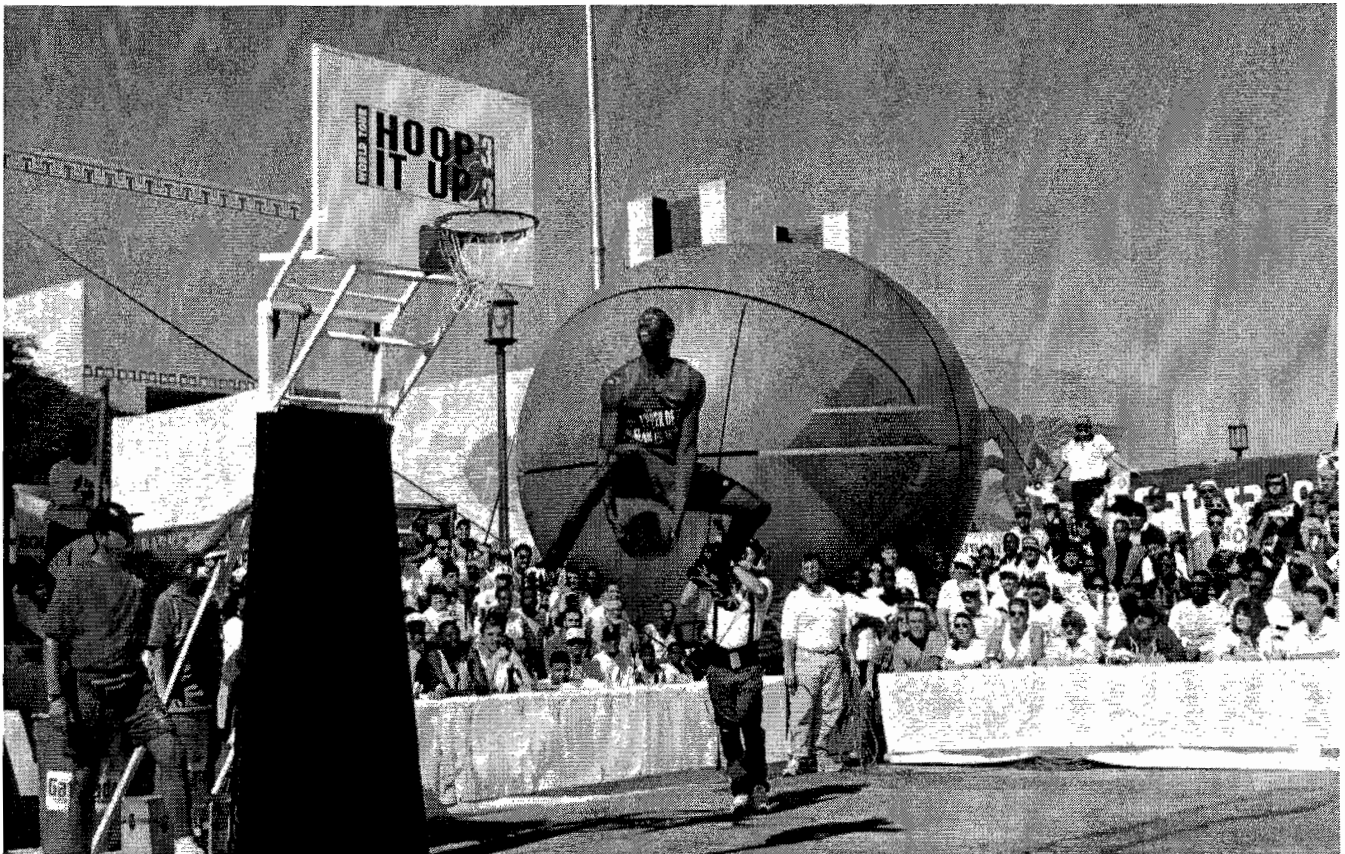



# Set-Up

## HOW TO USE THIS MANUAL


**T**HIS MANUAL IS written for operators and service personnel. It provides information for setting up, playing, testing, and maintaining your Hoop It Up® game.

Hoop It Up is a two-player basketball redemption game featuring real basketball controls that shoot air-activated balls into miniature hoops and nets.

Chapter 1 of this manual contains set-up and game play information. ♦ Chapter 2 contains a description of the test functions and option settings. The test modes are important in the Hoop It Up game. Using the tests, you can troubleshoot the large light-emitting diode (LED) score displays, the game printed-circuit board, and the controls. You should

regularly do these tests to keep your game in peak condition and at top earnings. ♦ Chapter 3 contains a troubleshooting table, plus maintenance and repair procedures for the game components. If you have problems with your game, use this chapter to troubleshoot and repair it. ♦ Chapter 4 contains the illustrations and Score Board PCB parts list. ♦ Chapter 5 contains the game wiring diagram and the

Score Board PCB schematic diagram. Copies of the game PCB schematic are available free of charge by contacting our Customer Service Dept.: see the inside front cover of this manual for the address and telephone numbers.

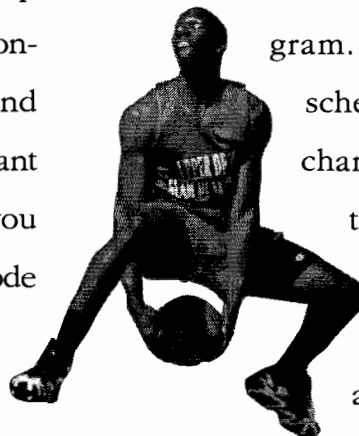

# Operating the Game

To operate your game for maximum income, you should regularly use the self-test to check the electronics, controls and sound. By using the self-test regularly, you can find and fix problems immediately. This lets you keep your game in top condition.

## Installation

Hoop It Up is shipped almost completely ready to install. Only three steps need to be taken before turning on the power.

### NOTE

*Do not change the angles of the top hoops. They are correctly installed when they tilt slightly up in the front (downwards towards the rear backboard). This angle helps players earn triples more easily.*

### Install the Playfield Balls

Unlock and remove the upper rear access door. Remove the three wood screws at the top of the backboard door and swing it open. Open the two packages of small balls. Put no more than 6 balls on each side of the playfield, on or near the ball shooter. Loading more than 6 balls will cause the ball shooter to jam up, and players will not be able to aim the balls correctly at the hoops. You should have at least 5 balls on each side of the playfield.

### NOTE

*We recommend using only high-quality balls, which will be less likely to crack. Such balls have no visible seams. These balls should be readily available in toy stores. If you cannot easily find these balls, call Customer Service for sources. In an emergency you can use white table tennis balls, which are the same size and weight.*

### Load the Ticket Dispensers

Load the ticket dispensers with a supply of tickets. Refer to the Deltronic Labs ticket dispenser manual for instructions on this procedure.

### Level the Game

One of the keys to a properly working Hoop It Up game is making sure that it is level, especially on the right/left axis. Even if the game tilts slightly to the right or left, players will have a difficult time making baskets.

Mounted inside the bottom of the game is a circular bubble level, which indicates if the game is not level in any direction. When you have moved the game to its location, open the lower rear access panel, and check the level. If the bubble is not in the center of the outlined circle, adjust the four adjustable glides until it is.

### Change the Bonus Tickets Sign (Optional)

A blue "Bonus Tickets" sign is installed inside the playfield, to indicate how many points are required to earn each ticket, and how many tickets are dispensed for each triple basket. The sign shows the manufacturer's recommended settings for the game software.

If you want to change these numbers, a supply of small blue decals is provided in the coin box. These should be pasted over the existing numbers on the Bonus Tickets sign. Refer to Chapter 2, Program Modes, for how to change the game software to your desired settings.

## Special Precautions

### WARNING

*To avoid electrical shock, do not plug in the cabinet until it has been properly inspected and set up for the line voltage in your area.*

This game is designed for indoor use only. The game must NOT be installed outdoors or under the following conditions:

- In areas directly exposed to sunlight, high humidity, direct water contact, dust, high heat or extreme cold.
- In locations that would present an obstacle in the case of an emergency, i.e., near fire equipment or emergency exits.
- On an unstable surface or subject to floor or other vibration.

This cabinet should be connected to a grounded, three-wire outlet only. If you have two-wire outlets, we rec-

ommend that you hire a licensed electrician to install grounded outlets. Players can receive an electrical shock if the cabinet is not properly grounded.

Make note of the power consumption when you set up this game so that you do not overload your electrical circuit. See Table 1-1 for the power consumption and the other important specifications of this game.

- Be sure to switch the power OFF before replacing any parts or connecting/disconnecting the electrical connectors.
- DO NOT attempt to repair the printed-circuit boards (PCB) yourself. This will void the warranty. The PCBs contain sensitive components that could easily be damaged by the small internal voltage of a multi-meter. Always return the faulty PCB to your distributor for repair.
- When unplugging the game from the electrical outlet, grasp the plug, NOT the cable.
- Make complete connections to all the PCBs and other parts of the circuit. Insufficient insertion of ICs and connectors will lead to unreliability and possible damage to the machine.

Characteristic	Specification
<b>Input Current</b>	3 Amps
<b>Line Fuse Rating</b>	4 Amps, 250 V, Slow-Blow
<b>Line Voltage</b>	102 to 132 VAC, 60 Hz
<b>Temperature</b>	37° to 100° F (5° to 38° C)
<b>Humidity</b>	Not to exceed 95% relative
<b>Width*</b>	31.25 inches (80 cm)
<b>Depth*</b>	35 inches (89 cm)
<b>Height*</b>	75 inches (190 cm)
<b>Weight*</b>	350 lbs. (159 kg)

\*Unboxed

**Table 1-1 Game Specifications**

## Inspecting the Game

Inspect your Hoop It Up game carefully to ensure that the game is complete and was delivered to you in good condition. Inspect the cabinet as follows:

1. Examine the exterior of the cabinet for dents, chips, or broken parts.
2. Open the lower-rear access panels. Unlock and open the coin door. Inspect the interior of the cabinet as follows:
  - a. Check that all plug-in connectors on the cabinet harnesses are firmly plugged in. Do not force the connectors together. The connectors are keyed so they fit only in the proper orientation. A reversed connector can damage a printed-circuit board (PCB). This will void your warranty.
  - b. Ensure that all plug-in integrated circuits on each PCB are firmly plugged into their sockets.
  - c. Check that the liquid crystal display (LCD) on the Game PCB is securely plugged into its header connector. The game *will not operate* if this display is loose.
  - d. Inspect the power cord for any cuts or dents in the insulation.
  - e. Inspect the power supply. Make sure that the correct fuses are installed. Check that the harness is plugged in correctly. Check that the green ground wires are connected.
  - f. Inspect other sub-assemblies, such as the controls, printed-circuit boards, and speakers. Make sure that they are mounted securely and that the ground wires are connected.

## Controls and Switch Locations

All the controls are located in the lower rear of the cabinet or behind the coin doors. The following paragraphs describe these locations in more detail.


Three small potentiometers are mounted on the Hoop It Up game PCB. To adjust these, you need a small (jeweler's) flat-head or Phillips-head screwdriver.

### Power On/Off Switch and Main Fuse

The power on/off switch is a toggle switch located on the power entry module, above the cabinet's lower rear panel. This is also the location of the game's main fuse.

### Ticket Dispensers

Two ticket dispensers, one for each player, are standard in the Hoop It Up game. Servicing information on the mechanisms is provided in the Deltronic Labs ticket dispenser manual, which was included in your Hoop It Up game.

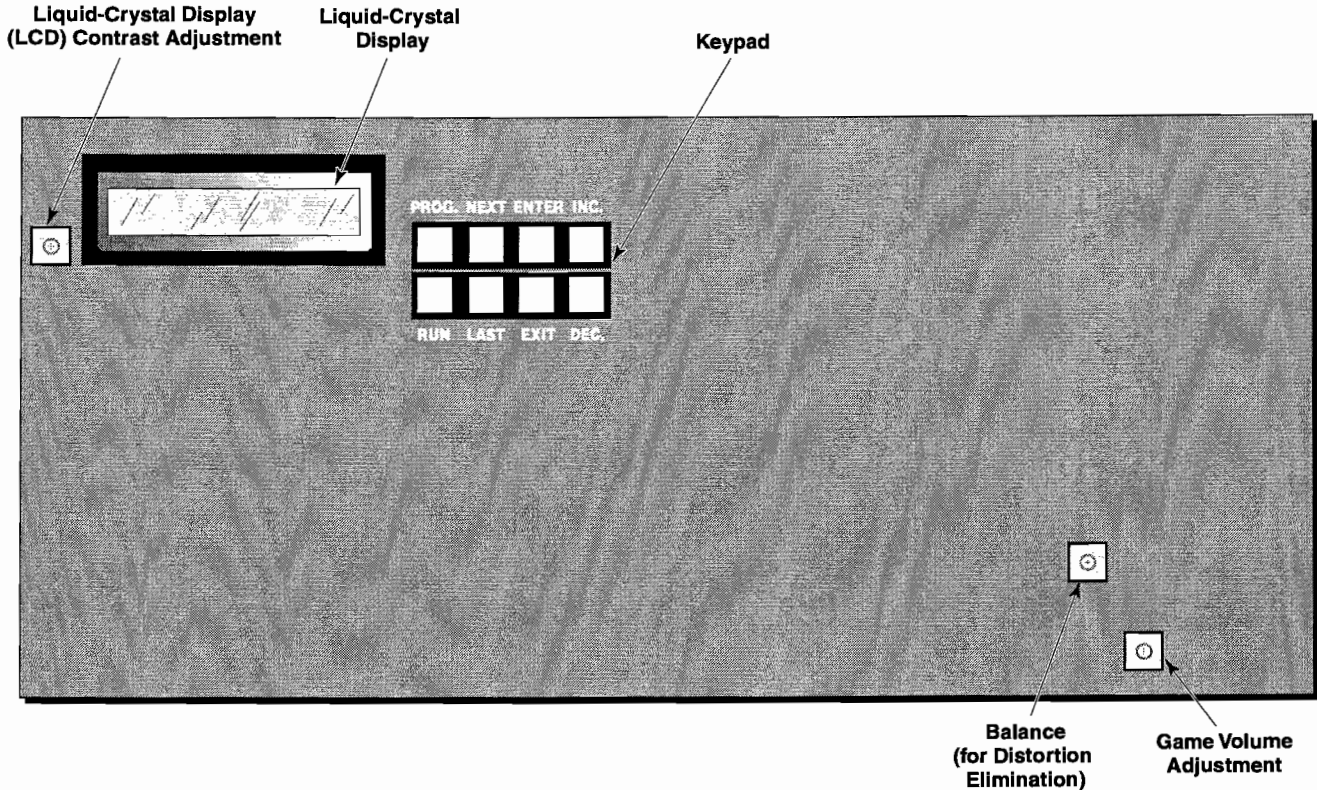

**Figure 1-1 Operator Controls on Hoop It Up Game PCB**

## Liquid-Crystal Display and Keypad

These components are mounted on the Hoop It Up Game PCB located inside the lower rear access panel. (Refer to Figure 1-1 for the locations of all operator controls on the game PCB.) Use the keypad to set the game parameters (options), game cost, and to perform the test functions.

To access the game PCB, unlock the lower rear panel and press the appropriate keypad pushbuttons while the power is turned on. You may need to use a flashlight to read the LCD. A small LCD contrast adjustment potentiometer is available next to the LCD; this brightens or darkens the display (see further details in the following section).

Refer to Chapter 2 of this manual for more information on the game parameters and test functions.

### Adjust Contrast of LCD

Turning this potentiometer (labeled LCD Contrast) all the way counterclockwise increases the contrast to maximum. This maximizes the legibility of the characters shown on the LCD.

## Volume Control

The volume adjustment potentiometer is on the game PCB. Turning this potentiometer in small increments adjusts the current volume setting.

### Balance

This potentiometer is intended for eliminating sound distortion in Hoop It Up. It should be set about in the middle. If you hear distorted sound, turn this potentiometer until the sound improves.

## Ticket Counter

The mechanical ticket counter is located inside the upper coin door. It is mounted against the internal wood panel. Note that a separate resettable ticket counter is available in the game software. Refer to Chapter 2 for more details.

## Coin Counter

The mechanical coin counter is located below the coin box, inside the lower coin door. Again, a separate resettable coin counter is available in the game software. Refer to Chapter 2 for more details.

# Setting the Coin, Ticket and Game Options

The Hoop It Up coin and game options are set in the test modes. Please refer to Chapter 2 for the recommended settings and the procedure for setting the options.

## NOTE

*To maximize earnings, refer to Chapter 2 for how to fine-tune the ticket payout.*

## Game Play

This section describes the features and play of the Hoop It Up game.


### Introduction

Hoop It Up is a unique basketball redemption game with two-player competition. Based on the successful "3 on 3" basketball tournament event of the same name, Hoop It Up is a head-to-head game that has players shooting for triple slam-dunk action.

Two players compete in a timed game for the high score. Using a real basketball control to shoot air-activated balls, players try to score with single, double or triple baskets. Bonus points are awarded for triple baskets. An on-court announcer, themed music, and a large LED score display add to the fun and excitement. Additional play modes include one player against the clock, and an advanced game option where players shoot for lit baskets.

### Game Play Hints

Players should attempt to score as many triple baskets as possible to obtain the highest score possible. A triple basket is awarded an additional 3 points, therefore scoring a total of 12 points.

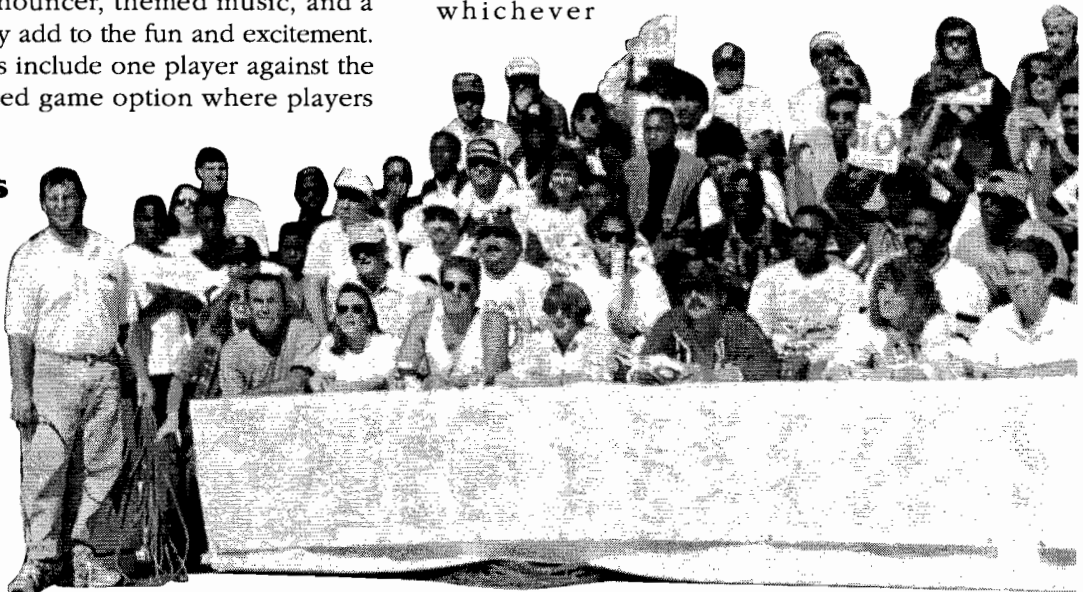

There are two aspects to consistently achieving the highest scores at Hoop It Up — shot pacing and ball placement.

Players should develop a rhythmic shooting pace in striking the ball control, therefore allowing each ball loaded into the shooter to settle in. Too fast a pace leads to inaccurate shooting and more bouncing balls in the playfield. These create obstacles that lead to more frequent blocked shots. As for ball placement, though, there may be different ways of making a triple basket or 12-point play; backboard or bank shots may provide the most consistent method of getting triple baskets.

### Game Play

The goal is to achieve the highest score possible before the game timer sounds, ending the game. For ticket dispensing, players are awarded tickets based on score and number of triple baskets, which are operator adjustable. An audio cue of "That's a new record!" will be sounded when a player's score is equal to or greater than the prior high score. The high score is displayed and retained indefinitely, unless reset through the option menu. (Refer to Chapter 2 for details on how to reset the high score.)

In a head-to-head competition, if the scores are tied, the game will go into overtime, extending the game timer another 10 seconds. The first player to score a basket wins. If players are unable to score during the extended time, the game will end in a tie.

### Advanced Game Mode

During an advanced game, players must attempt to shoot balls into  
whichever

baskets are lit by red LEDs. Double and triple baskets are awarded after first scoring a lit basket. There are no bonus points given during an advanced game.


To enter the advanced game mode, players must hold the start button down while inserting coins and then release it. At this point, the start button should be lit, indicating credit for coin(s) inserted. To start an advanced game, press the start button.

1. When selecting the advanced game, coins must be inserted one game at a time.
2. For head-to-head competition, only *one player* needs to select the advanced game if both players want to be in the advanced game mode.
3. The advanced game mode cannot be accessed if there are existing credits on the game. The game defaults to normal game mode for the remaining credits, unless players insert additional coins to activate the advanced game mode.

# Test Functions

## INTRODUCTION

**U**SE THE HOOP IT UP® test functions to check the condition of the game circuitry and controls. You will see the test-function information on the liquid-crystal display (LCD) installed on the game printed-circuit board. Also, you can use the LCD and keypad to set the game parameters and game cost. Perform the test when you first set up the game, each time you collect the money, or when you suspect game problems. This chapter describes the messages displayed in the test functions and explains each of the tests. The test descriptions and explanations are arranged in the order they appear as you step through the entire sequence.

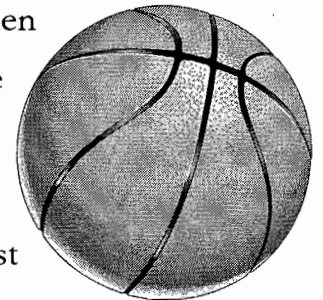

# Using the Liquid-Crystal Display on the Game PCB

All accounting displays, option adjustments, and tests are made using the keypad with eight pushbuttons located on the Hoop It Up Game Printed-Circuit Board (PCB). The liquid-crystal display next to these pushbuttons shows which test or option you are currently using. Refer to Figure 2-1 for the locations of the LCD, keypad, and other user controls on the game board.

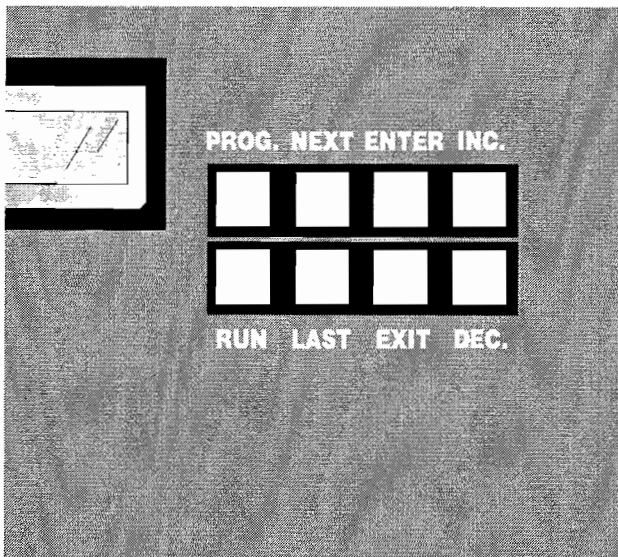


Figure 2-1 Detailed View of Keypad

## Attract-Mode (Accounting) Functions

Four accounting functions are available in the attract mode. They are listed in Table 2-1 and show the accounting data for Hoop It Up. To step through the sequence, press the NEXT or LAST button several times. *Be sure to wait at least one second for each function to appear on the LCD.*

Function	Description
Coins	Number of coins played
Tickets	Number of tickets dispensed
T/C Ratio	Tickets-dispensed-to-coins-played ratio
Triples	Number of triple baskets made

Table 2-1 Summary of Accounting Functions

## Program Modes

You can enter the Program Mode *only* when the game is in the attract mode with no credits entered. To do so, press the PROG key on the PCB keypad. The first mode displayed is the Set Parameters mode. If you press the PROG key repeatedly, the remaining three modes (Set Cost \$/Game, Test Functions, and Display Memory) are also displayed. The game cycles through this sequence each time you press the PROG key.

To enter one of the four modes, press the NEXT key. To exit from the Program Mode and return the game to the attract mode, press the RUN key. Press the PROG key to enter the next mode.

### NOTE Adjusting the Payout Percentage

*Three of the parameters listed below should be adjusted to achieve your desired payout percentage. The parameters are Games Time(s), Bonus Tickets and Points/Ticket. For the Bonus Tickets parameter, we recommend using 5 tickets. However, you could set this number to 4 or even 3 tickets, if you find that your average triples are too high. You should average 1-2 triples per game, based on our recommended settings. Use the accounting functions to determine your average number of triples per game.*

### Set Parameters Mode

Pressing the NEXT key causes *GAME = HoopItUp REV xx* to be momentarily displayed. Then the first parameter — *GAME TIME(S)* — is displayed. You can select another parameter by pressing the NEXT or LAST key.

To change the values displayed in any of the parameters, press the INC (increment) or DEC (decrement)



Parameter	Recommended Setting
<b>Game Time(s)</b>	45 seconds
<b>Attract Repeat Time</b>	45 seconds
<b>Award 1</b>	03 points
<b>Award 2</b>	03 points
<b>Award 3</b>	03 points
<b>Bonus Award</b>	03 points
<b>Bonus Tickets</b>	05 tickets
<b>Game 2 Basket</b>	03 points
<b>Minimum Tickets</b>	01 ticket

Parameter	Recommended Setting
<b>Miss Time(s)</b>	05 seconds
<b>Tune On?</b>	1 (yes)
<b>Ticket Sound On?</b>	1 (on)
<b>Enable Tickets?</b>	1 (enabled)
<b>Points/Ticket</b>	012 points
<b>Attract Ball Load</b>	Every 2 minutes
<b>Reset Ticket/Coin</b>	0 (don't reset)
<b>Reset Triple?</b>	0 (don't reset)
<b>Reset High Score?</b>	0 (don't reset)

**Table 2-2 Summary of Recommended Settings for All Parameters**

key. Then press the ENTER key to move left, or the EXIT key to move right. To exit the mode, press the PROG or RUN key.

The following 18 parameters are available:

#### **Game Time(s)**

Game clock timer adjustment (number of seconds for game duration). Recommended: 45 seconds.

#### **Attract Repeat Time**

Initiate the attract-mode audio every x seconds. Recommended: 45 seconds.

#### **Award 1**

Point value for top baskets in Game 1. Recommended: 03.

#### **Award 2**

Point value for middle baskets in Game 1. Recommended: 03.

#### **Award 3**

Point value for bottom baskets in Game 1. Recommended: 03.

#### **Bonus Award**

Additional points granted for making a triple basket. Recommended: 03.

#### **Bonus Tkts**

Number of tickets dispensed for making a triple basket. Recommended: 05.

#### **Game 2 Basket (Advanced Game Basket)**

Point value for each basket in advanced games. Recommended: 03.

#### **Min Tickets**

Minimum number of tickets to be paid for any game. Recommended: 01.

#### **Miss Time(s)**

Number of seconds to wait for a basket before playing the “bad” message. If a score is received within this time, a “good” message will be played. Recommended: 05.

#### **Tune On? 1=Yes**

Attract-mode audio to be turned on (1) or off (0). Recommended: 1.

#### **Tkt Sound On?**

Special ticket-dispensing audio to be turned on (1) or off (0). Recommended: 1.

#### **Enable Tkts?**

Ticket payout to be enabled (1) or disabled (0). Recommended: 1.

#### **Points/Tkt**


Score value required to earn one ticket. Recommended: 012.

#### **Attr Ball Load**

Attract-mode feature: loads one ball into each shooter every x minute(s). Recommended: 2.

#### **Rst Tkt/Coin**

This parameter affects the first three accounting functions listed in Table 2-1. To clear the internal software ticket and coin counters and the tickets-to-coins ratio,

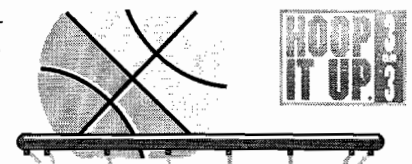

choose 1; to leave the counters intact, choose 0. Recommended: 0.

---

### **NOTE**

*Both mechanical counters are not affected by this parameter.*

---

#### **Reset Triple?**

Clears the internal triple basket counter (1) or leaves the counter intact (0). Recommended: 0.

#### **Rst HI Score?**

Clears the high score and reset it to zero (1) or leaves the high score intact (0). Recommended: 0.

### **Set Cost \$/Game**

The 12 parameters in this mode determine the number of coins required for 1–12 games. The game is shipped with these settings: 1 game/1 coin, 2 games/2 coins, ... 12 games/12 coins.

You must *not set* any of the coins required to 0. Also, the number must not decrease in value as the number of games increases.

For example, if you set 1 game/2 coins, then you must set 2 games/4 coins, 3 games/6 coins all the way up to 12 games/24 coins.

To select one of the 12 parameters, press the NEXT or LAST key. To change the coinage values displayed next to each parameter, use the INC or DEC keys. To select the column of the number you want to change, press the ENTER key to move left, and the EXIT key to move right. To exit this mode, press either the PROG or RUN key.

### **Test Functions**

#### **LED Display Test**

Turns on all the LEDs (light-emitting diodes) on the backboard, and steps through the digits 0 through 9

on all four displays. This way you can check that they are all working.

#### **Sound Test**

Cycles through all audio. This test is mainly for Time Warner Interactive Customer Service use, so that they can check that the audio circuitry is working properly. Press INC to select the next sound, then press ENTER to hear it. Note: The Channel 1 sounds should work, but the Channel 2 sounds do not, because this game uses one channel of audio.

#### **Memory Test**

A self-running test of all memory components. When completed, you should see the message *Memory Okay*. Press EXIT when you are done.

#### **Tickets A Test**

Tests the left ticket dispenser, by dispensing two tickets from the mechanism.

#### **Tickets B Test**

Tests the right ticket dispenser, by dispensing two tickets from the mechanism.

#### **Port B Outputs, Port C Inputs, Extended Inputs, Extended Outputs, 250MA Out J1-07, and 125MA Out J6-02**

The remaining tests allow technicians to test various outputs and inputs. These tests are for Time Warner Interactive Customer Service use only.


## **Display Memory**

This test is for Time Warner Interactive Customer Service use, to check the contents of memory during troubleshooting.

# Troubleshooting & Maintenance

## INTRODUCTION

**T**HIS CHAPTER contains maintenance, troubleshooting and repair procedures for your Hoop It Up® game. The maintenance section gives information on cleaning the parts. The troubleshooting section contains several tables to help determine the source of a problem and the steps necessary to repair it. The repair section contains the steps necessary to remove and install the serviceable parts. Together, these three sections provide a complete guide to servicing your Hoop It Up game.

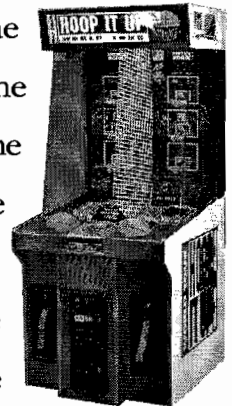

# Maintenance Procedures

## Introduction

This section describes the maintenance procedures for all of the major assemblies and components of the game. The

maintenance procedures should be performed regularly. We recommend every 3–4 months.

One of the important parts associated with the ball shooter is the spanker, a thin metal blade just behind the ball shooter. The spanker should be raised every time one of the rotor prongs passes by it. The spanker assures that the ball shooter is always loaded. Without the spanker, two balls can become wedged together at the high end of the

Problem	Suggested Action
<b>Coin Mechanism Problems</b>	<ol style="list-style-type: none"> <li>1. Check the wiring connections to the coin mechanism.</li> <li>2. Check the voltage to the + side of the mechanism.</li> <li>3. Check the fuses on the power supply.</li> </ol>
<b>Ticket Dispenser Problems</b>	<ol style="list-style-type: none"> <li>1. Check for jammed tickets.</li> <li>2. Use the test functions to check the left (A) or right (B) ticket dispenser.</li> <li>3. In the Set Parameters test, make sure Enable Ticket Payout is turned on (1).</li> <li>4. Check the harnesses and connectors.</li> <li>5. If you took the ticket dispenser apart, have you reassembled it correctly?</li> <li>6. Make sure all the parts of the ticket dispenser are in good order. Repair or replace parts as needed. Refer to the Deltronic Labs ticket dispenser manual that was included in your Hoop It Up game.</li> </ol>
<b>Basket &amp; Microswitch Problems</b>	<ol style="list-style-type: none"> <li>1. If players cannot easily make triple baskets, gently bend the front of the top basket slightly upwards.</li> <li>2. If the ball comes to rest on a switch wire, the wire is restricted in its travel. Check by pressing on the clear disc. If the hole in the net is not large enough to allow the wire to move completely unrestricted, use scissors to cut one of the net strings below the wire.</li> <li>3. Check for proper operation of the switch wires, by dropping a few balls from above the top net straight downwards. All three switch wires should register scores and should allow the balls to fall all the way down, scoring a triple basket.</li> </ol>
<b>Ball Shooter Problems</b>	<ol style="list-style-type: none"> <li>1. If the ball shooter motor spins constantly, the optical sensor wire is probably broken, or if not, the optical sensor itself is defective.</li> <li>2. If <b>one</b> ball shooter consistently shoots balls to the right or left of the baskets, you need to adjust the right/left tilt of that shooter. (This procedure should be necessary only if you reinstall the entire ball shooter assembly.)</li> <li>3. If <b>both</b> ball shooters consistently shoot balls to the right or left of the baskets, you probably need to adjust the right/left tilt of the entire game. Use the bubble level inside the bottom of the game, and adjust all four adjustable glides (feet) until the bubble is in the center of the outlined circle.</li> <li>4. Make sure the spanker is working: it should be bent upwards with each quarter-rotation of the rotor. The spanker ensures that the ball shooter always is fed with balls.</li> <li>5. If the ball shooter doesn't shoot balls, foam or other debris is probably trapped inside of the shooter. Otherwise, the spring or piston is broken.</li> </ol>
<b>Sound Problems</b>	<ol style="list-style-type: none"> <li>1. Check the speaker volume setting: make sure the volume isn't turned all the way down. The volume is controlled with the small volume control on the Game PCB.</li> <li>2. Check the Sound Test in the Test Functions. This test cycles through all audio.</li> <li>3. Check the harness connections on the speaker.</li> <li>4. Check the resistance of the speaker for 4 Ohms.</li> </ol>

**Table 3-1 General Troubleshooting**

ball shooter ramp, preventing any balls from reaching the air cylinder, the lowest part of the ramp.

### **WARNING**

*Before performing any maintenance or repairs, please observe all of the following safety precautions:*

1. Turn the game's power off.
2. Unplug the power cord from the electrical socket.
3. Secure loose clothing such as ties and long sleeves that could get caught within the game. Secure long hair.
4. Remove all metal jewelry such as watches and necklaces that could conduct electricity from the game's power sources.

## **Cleaning Procedure for Coin Mechanisms**

Regular use of the coin mechanism can result in a build-up of residue and dirt. To clean the coin mechanism, perform the following steps (please refer to Chapter 4 for detailed part information on the coin door):

1. Open the upper coin door.
2. Open the gate on the door that covers the magnet. Use the blade of a screwdriver to scrape away any metal filings that have collected on the magnet.
3. Clean the loose dust and dirt from the coin mechanism with a lint-free rag or a soft brush.
4. Clean the dirt and residue from the coin path with a toothbrush. Hot, soapy water may be used to help dissolve dirt and residue.
5. Blow out all the loose dirt, and dry the coin mechanism with compressed air.
6. Close the gate on the door covering the magnet. Then close the upper coin door.

### **CAUTION**

*Never lubricate the coin mechanism with oil or grease.*

## **Cleaning Procedure for Ticket Dispensers**

Regular use of the ticket dispensers can result in a build-up of paper dust, residue, and dirt. For detailed maintenance and part information on the ticket dispenser, refer

to the Deltronic Labs ticket dispenser manual that was included in your Hoop It Up game.

## **Cleaning Procedure for Ball Shooter**

It is possible for the ball shooter assembly to become clogged with tiny particles of foam from inside the basketball control. If this occurs, you will need a can of compressed air, preferably with a thin nozzle tube, and a clean cloth. Follow these steps and refer to Figure 4-6:


1. Unlatch the control panel. Loosen and remove the hose clamp that is attached to the hose connector (the bottom metal cylinder under the ball shooter).
2. Insert a screwdriver or pen into the metal tube, and push the white piston inside until it reaches the upper end.
3. While holding the piston in, spray compressed air into all four cylinder exhaust holes (see Figure 4-6 for their locations). Any debris inside should be ejected past the screwdriver into your hand.
4. Unlock the upper rear access panel, open the backboard, and reach into the playfield area. Using a lint-free cloth, wipe any debris from the ball shooter around the white piston.

### **CAUTION**

*Never lubricate the ball shooter with WD-40 or any other lubricant. The shooter will become clogged and stop working if you use any lubricant. Simply keep the ball shooter clean and free of any debris by blowing air through the four cylinder exhaust holes as described in the previous steps.*

# **Troubleshooting Procedures**

You should pinpoint the cause of a malfunction by using the test procedures described in Chapter 2. Any repairs, other than minor procedures such as bulb replacement or mechanism cleaning, should be referred to qualified service personnel.

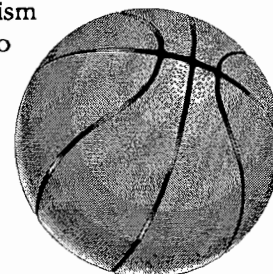

# Repair Procedures

## Introduction

This section describes the repair procedures for all of the major assemblies and components of the game. Before performing any repairs, use Table 3-1 to help discover the source of the problem. The *Maintenance Procedures* section can also be a good starting point for fixing many game problems before beginning what might be unnecessary repairs.

## Ball Shooter Spring and Piston

If you have blown air into the ball shooter and it still does not work, this indicates that the spring or piston has failed. To replace either of these parts, follow these steps and refer to Figure 4-6:


1. Unlock the control panel.
2. Remove the heat-shrink tubing or tape that is used to seal the bottom of the ball shooter against air leakage.
3. Remove the set screw and spring lock washer that secure the metal hose connector to the bottom of the ball shooter.
4. Carefully lower the hose and its connector. With your other hand, catch the piston and spring before they fall out of the ball shooter.

5. Insert a new piston and/or spring into the ball shooter. The large end of the piston must face down. With one hand, hold the piston inside the ball shooter.
6. With your other hand, insert the hose connector into the bottom of the ball shooter. Reinstall the set screw and spring lock washer.
7. Reseal the area next to the set screw by using tape.

## Replacing the Ball Shooter Motor or Optics

To replace either the motor or the optics in the ball shooter, you *may* be able to leave the ball shooter assembly installed in the game. However, access is much easier if you remove the ball shooter assembly from the game.

1. Unlock the upper rear access panel and open the backboard. Unscrew the three hold-down screws along the bottom edge of the divider net.
2. Remove the three screws that secure the floor-panel metal ramp. Lift up the ramp and slide it out from under the ball shooters.
3. Unlatch and open the control panel. Disconnect the motor harness assembly under the ball shooter.
4. Loosen the screw on the hose where it is attached to the hose connector (under the ball shooter). Slide the hose off from the hose connector.

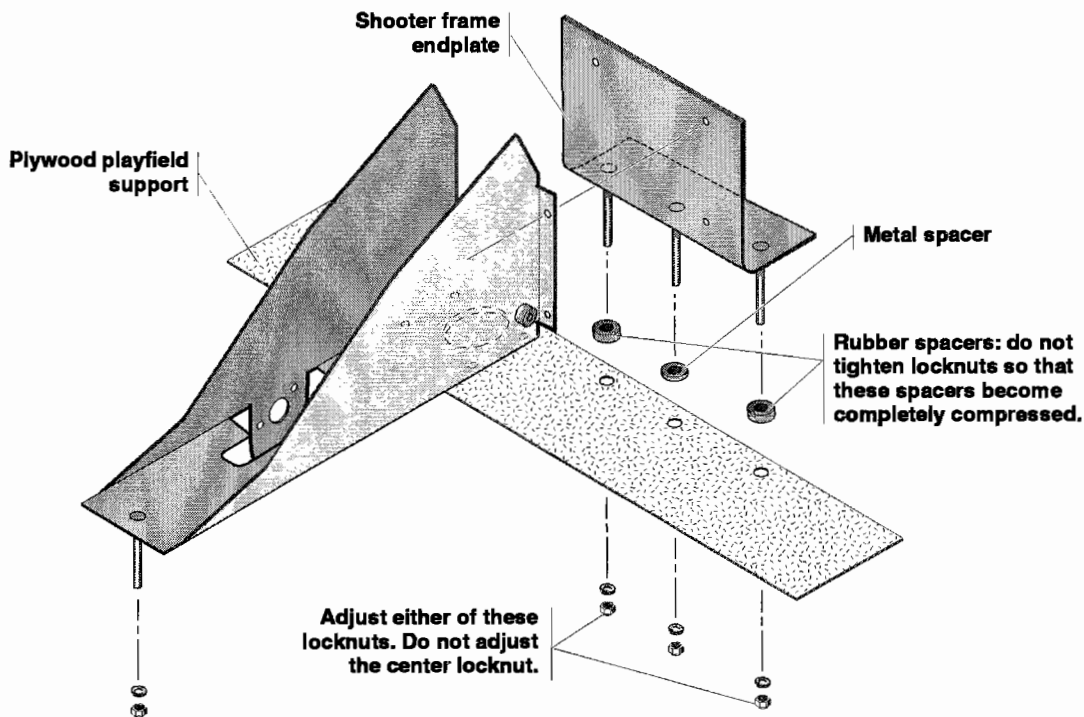

**Figure 3-1 Ball Shooter Adjustment**

5. Remove the four nuts from underneath the ball shooter assembly.
  6. Being careful so that you don't tear the decal on top of the spanker, gently lift up the spanker blade. Remove the ball shooter assembly. At this point the motor or optics can be replaced on the ball shooter.
  7. If you need to replace the optics, remove the hot-melt adhesive that secures both halves of the optical system. Then pull the LED and optical sensor out of their spacers on each side of the shooter frame.
3. For ease in handling, you may want to remove the hose that is attached directly to the bottom of the manifold plate.
  4. Loosen all four hose clamp screws, and remove the hose clamp set completely. Remove the basketball cover from the manifold plate.
  5. Install a new basketball cover, making sure its cut edge is completely flush with the manifold plate.
  6. Reinstall the remaining parts in the reverse order, making sure the reed valve is properly placed (completely flat on the manifold plate).

## Ball Shooter Right/Left Tilt Adjustment

If the ball shooter consistently shoots balls to the right or left of the baskets, you need to adjust the right/left tilt of the shooter. (This procedure should be necessary only if you reinstall the entire ball shooter assembly.)

To adjust the ball shooter, you will need a  $\frac{3}{8}$ -inch open or box-end wrench. Follow these steps and refer to Figure 3-1:

1. Reassemble the ball shooter parts as shown in Figure 4-6. Then reinstall the shooter into the playfield as described in the previous section. Do not yet latch the control panel shut.
2. Allowing each ball to settle completely into the ball shooter, shoot several balls at the baskets. Check where most of the balls hit the backboard.
3. If the balls are all shooting to the *right* of the baskets, swing down the control panel. Adjust the right/left tilt by tightening the nut on the *left* front side under the shooter. If the balls shoot to the left, tighten the *right* front nut. Continue shooting balls and adjusting the nuts until most of the balls hit the center of the backboard.

## Basketball Control

Over time the Spalding basketball cover will become worn. You should replace it before it wears through, to avoid players destroying the foam underneath. The control will still operate correctly if the ball is worn smooth. To replace the cover, refer to Figure 4-4 and 4-5, and follow these steps:

1. Open the control by releasing both spring draw latches. These are located inside and above the upper coin door.
2. Remove the four locknuts and flat washers under the basketball (bellows) assembly, and the four spacers and carriage bolts above the basketball. Lift the assembly up.

## Speaker

The Hoop It Up game speaker is located under the control panel, at the front of the game. The speaker provides the music and sounds for the game and self-tests. Speaker failure can be the cause of distorted or no sound. To replace the speaker, follow these steps and refer to Figure 4-1:

1. Remove the four screws securing the speaker grille. Remove the speaker grille by pulling it out; then set it aside.
2. Remove the four speaker mounting screws, and lift out the speaker.
3. Disconnect the harness from the speaker, including the earth ground clip.
4. Replace and reinstall the speaker in the reverse order.

## Attraction Panel Fluorescent Light

To replace the attraction-panel light bulb, follow these removal and installation steps:

1. Remove the three Phillips-head screws securing the upper attraction retainer at the top of the game. Lift out the attraction shield and graphics film.
2. Remove the cardboard retaining clips one at a time by pressing on the circular tab and pulling the clip toward you.
3. Rotate the bulb toward you while gently pulling on the bulb to remove it.
4. Install a new fluorescent light and rotate it 90° to lock it in place. Reinstall the retaining clips.
5. Close up the attraction panel area by replacing the graphics film, the shield, and the upper retainer.

## Playfield Incandescent Lights

To replace either of the playfield area incandescent light bulbs, follow these removal and installation steps:

1. To gain access to the incandescent lights, first remove the fluorescent light (see the previous section).
2. Reach in above the “eggcrate” light diffuser, and unscrew the incandescent light bulb.
3. Screw in a new light bulb into the socket. Reinstall the fluorescent light.
4. Reinstall the attraction shield, graphics film, and retainer.

## Backboard and Playfield Components

The replaceable parts on the backboard are the nets, microswitches, and Ping-Pong-type basketballs on the playfield. To replace these parts, open the upper rear access panel, and follow the instructions below.

### Nets

The string nets should be replaced if they become torn or dirty. To replace a net, follow these steps and refer to Figure 4-3:

1. Open the backboard panel by removing the three upper screws and swinging the panel open. Remove the hoop by unscrewing the two screws on the hoop's bracket.
2. Slightly push down on the left side of the hoop, next to its attachment bracket. Slide the old net around the hoop and remove it at the open (left) end.
3. Thread each loop of the new net over the open end of the hoop. Make sure you do not stretch the net too much before all the loops are on the hoop; otherwise you may unravel the net. Evenly distribute the loops around the hoop.
4. Reinstall the hoop and net by threading the switch wire and disc through the rearmost net hole. Then reattach the hoop with the screws you removed earlier.

### Microswitches

Note that new switches are shipped pre-assembled with the switch wire and plastic disc attached. Replace the defective microswitch as follows (refer to Figure 4-3):

1. Unplug the two harness connectors for the backboard assembly that you are working on.
2. Remove the backboard assembly by unscrewing the two #10 x 3/4-inch screws attached to the rearmost edge of the blue backpost. Lift out the backboard assembly towards the front of the game.
3. Remove the two screws from the defective switch. (A rectangular access hole is provided for each switch.) Slide out the switch towards the rear of the backboard

assembly. You will have to slightly squeeze the clear disc to make it fit through the opening.

4. Reinstall the new switch, wire, and disc by carefully sliding the disc through the opening. Turn the switch 90° and secure it with the two screws.
5. Reinstall the backboard assembly by resealing the two screws into the backpost. Plug the two harness connectors together again.

### Basketballs

Open the backboard panel, and put no more than 6 basketballs on each side of the playfield, on or near the ball shooter. Loading more than 6 balls will cause the ball shooter to jam up, and players will not be able aim the balls correctly at the hoops. You should have at least 5 balls on each side of the playfield.

### NOTE

*We recommend using only high-quality basketballs, which will be less likely to crack. Such balls have no visible seams. These balls should be readily available in toy stores. If you cannot easily find these balls, call Customer Service for sources. In an emergency you can use white table tennis balls, which are the same size and weight.*


## System Logic Assemblies

This section describes the repair and maintenance procedures for the major assemblies and components related to the system's logic and electronics. This includes the printed-circuit boards (PCBs) and the power supply. These components are housed in the bottom of the game cabinet, behind the lower rear access panel. We recommend that this procedure be performed by qualified service personnel only.

### Hoop It Up Game PCB

The Hoop It Up game PCB is responsible for the game sounds and game play. Failure of the game PCB may result in erratic or no game play. If this is the case, repair or replace the game PCB by following the removal and installation steps below.

1. Make sure the power to the game is turned off. Unlock the cabinet's lower rear access panel.

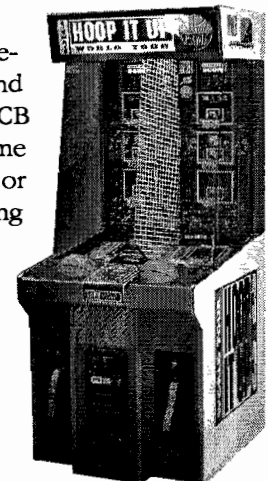



2. Remove the four nut/washer assemblies that secure the metal game-PCB cover.
3. Disconnect the harness connectors from the game PCB.
4. Unfasten the six screws that secure the game PCB to the inside wall of the cabinet. Remove the game PCB.

---

### **CAUTION**

*Before handling static-sensitive components, properly ground yourself to remove any static charge buildup.*

---

5. Re-install the game PCB by following the previous steps in the reverse order. Be sure to reinstall the game PCB cover, since this is required to meet FCC EMI emission requirements.

### **Power Supply**

The power supply is responsible for providing power to all of the game assemblies that require it. Failure of the power supply may result in erratic game play or no power at all. To remove the power supply assembly, perform the following steps:

---

### **WARNING**

*The power supply can contain high voltages even after the power is turned off. To avoid injury, observe all of the safety precautions before working on the power supply. (Refer to the warning in the Maintenance Procedures section at the beginning of this chapter.)*

---


1. Unlock and remove the lower rear door of the cabinet.
2. Disconnect the wiring harnesses from the power supply.
3. Unfasten the two screws that secure the power supply assembly to the cabinet floor, and remove the power supply assembly.
4. Re-install the power supply assembly by following the previous steps in the reverse order.

**N O T E S**

# Parts Illustrations

## PART ORDERING INFORMATION

**T**HIS CHAPTER provides information you need to order parts for your game. When you order parts, give the part number, part name, the number of this manual, and the serial number of your game. With this information, we can fill your order rapidly and correctly. We hope this will create less downtime and more profit from your games. Time Warner Interactive Customer Service phone numbers are listed on the inside front cover of this manual.

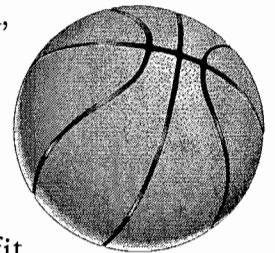


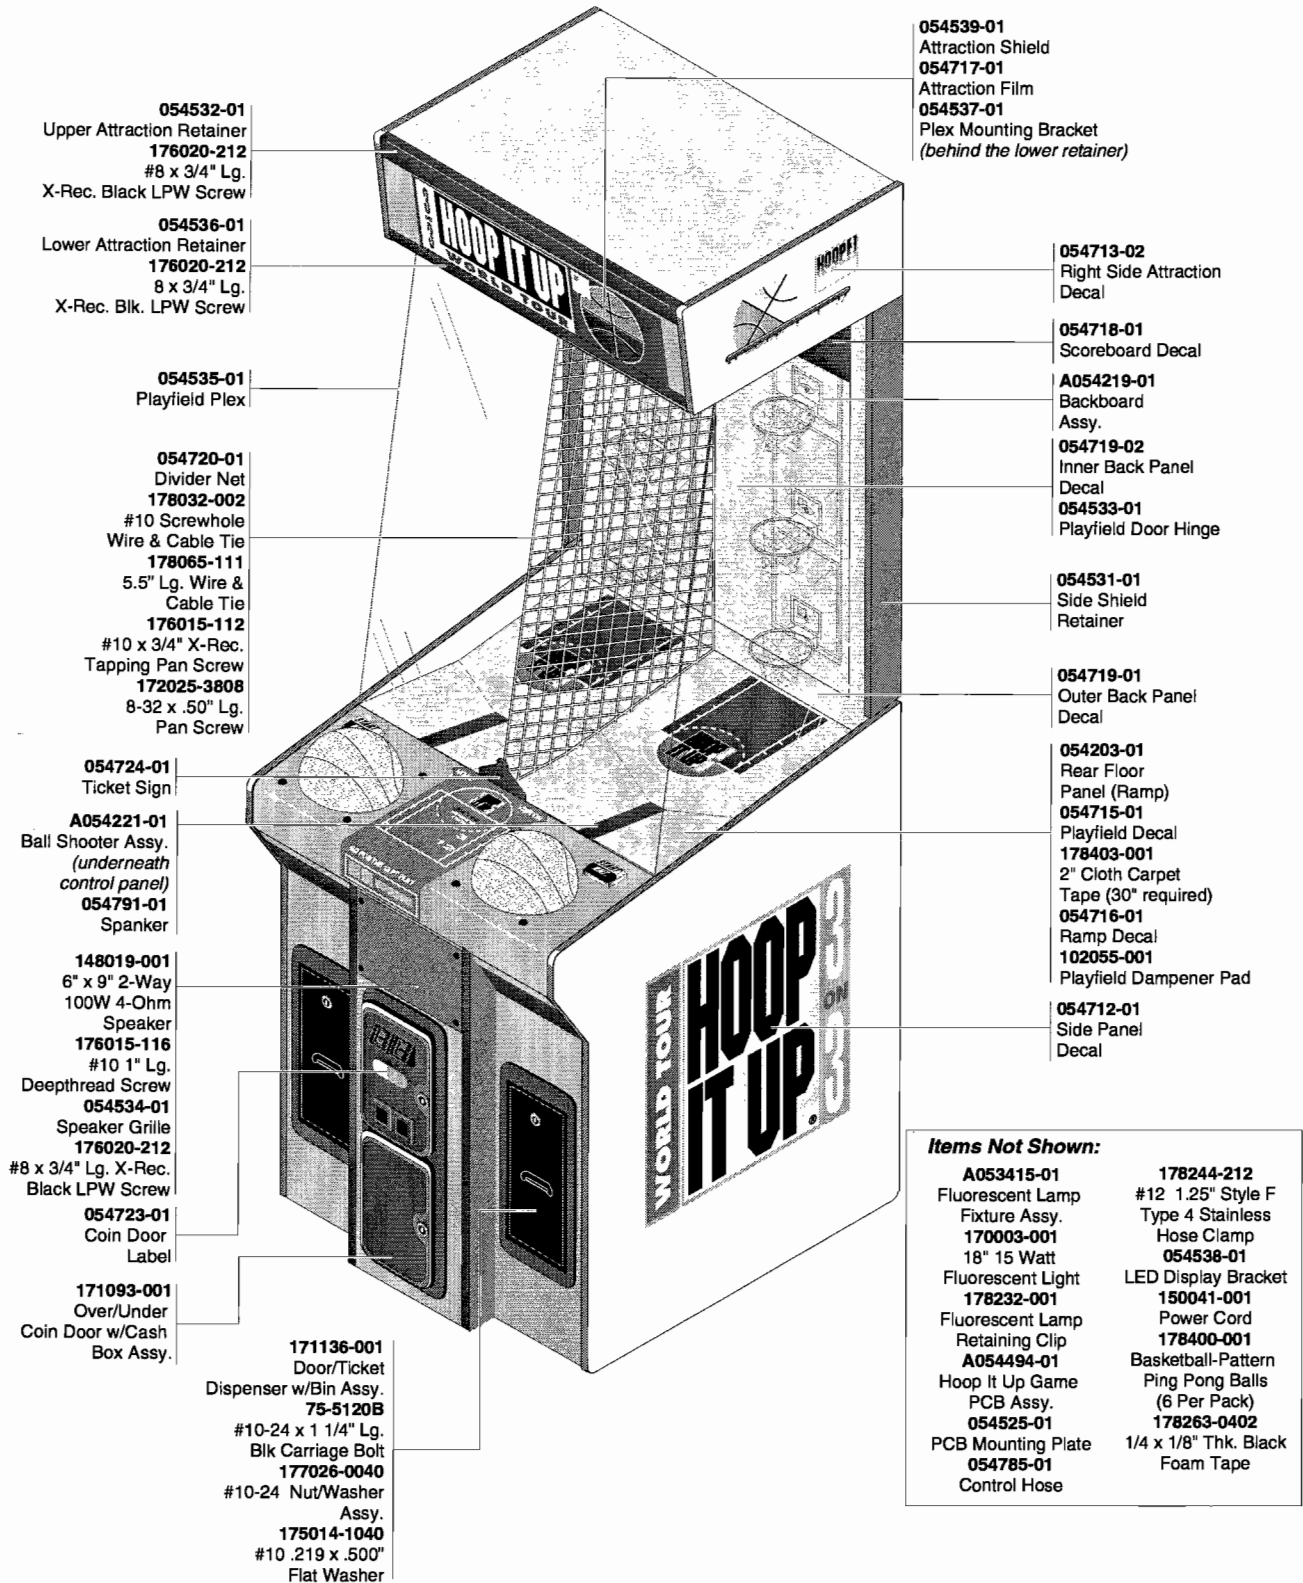



Figure 4-1 Cabinet-Mounted Assemblies, Front View

A054490-02 Rev. C

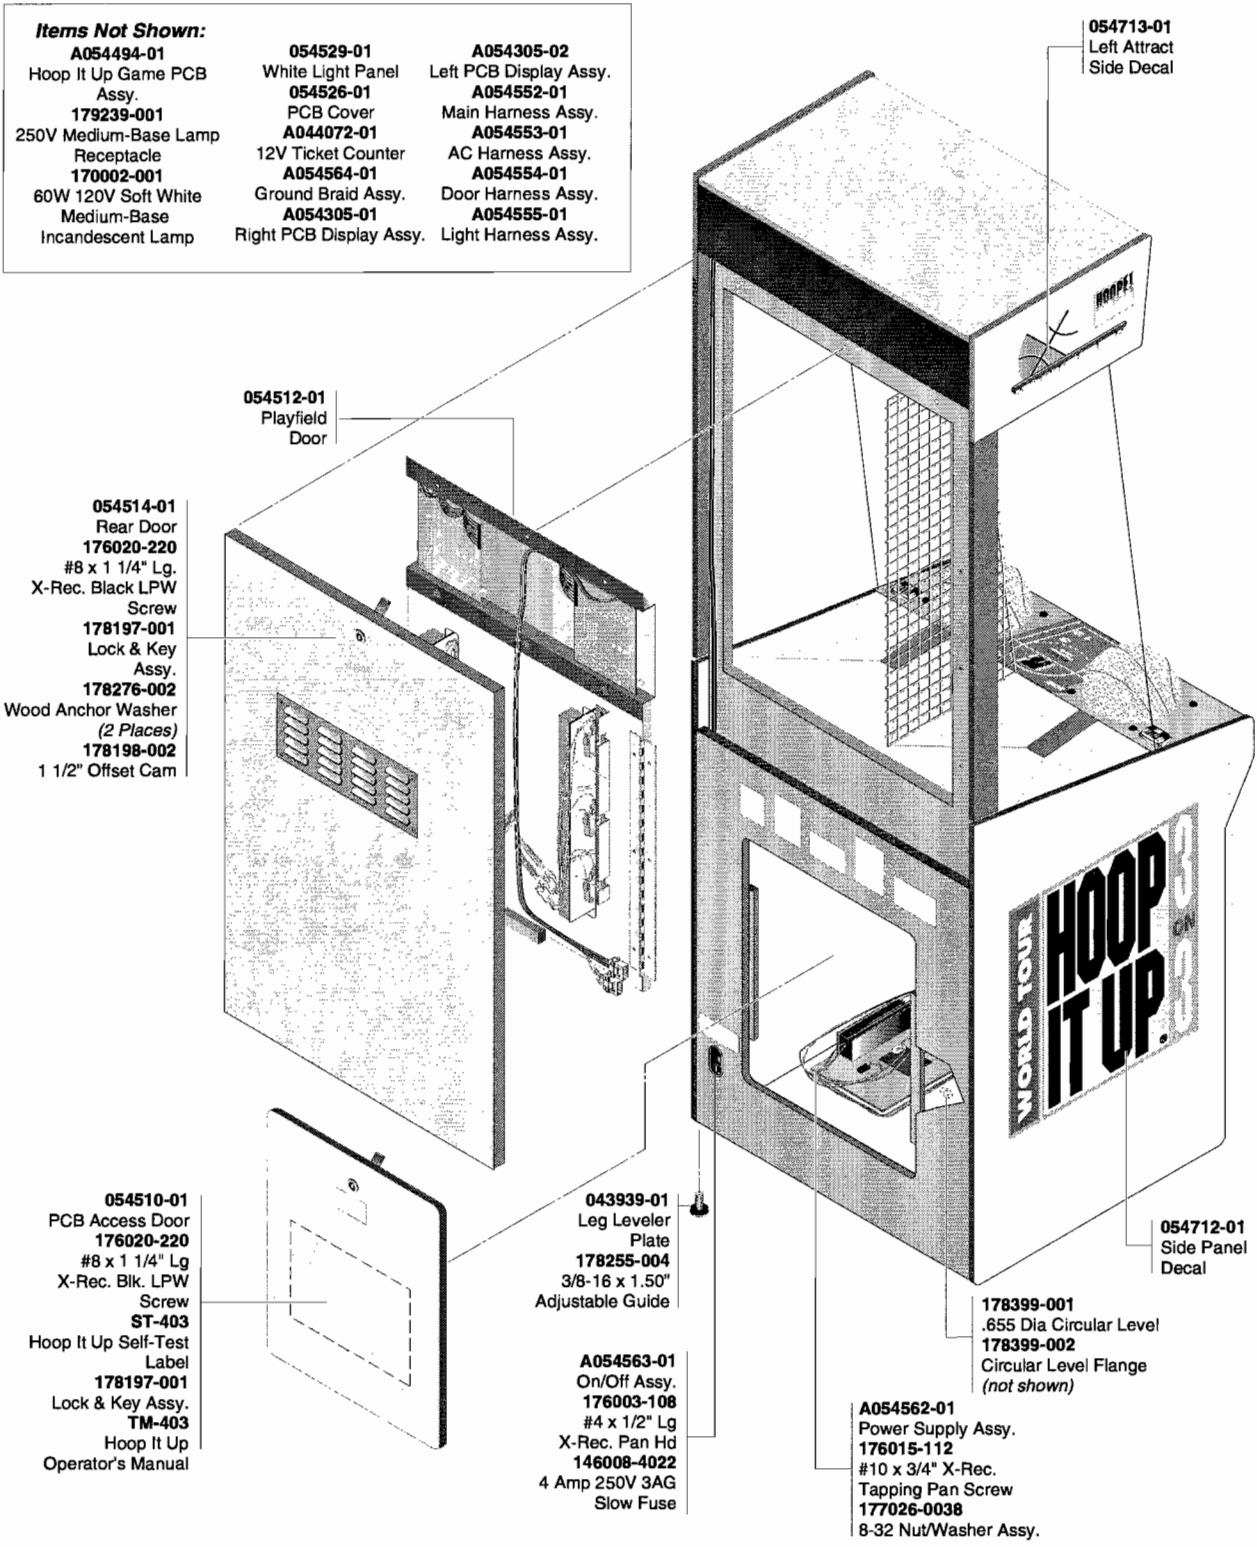


**Figure 4-2 Cabinet-Mounted Assemblies, Rear View**

A054490-02 Rev. C

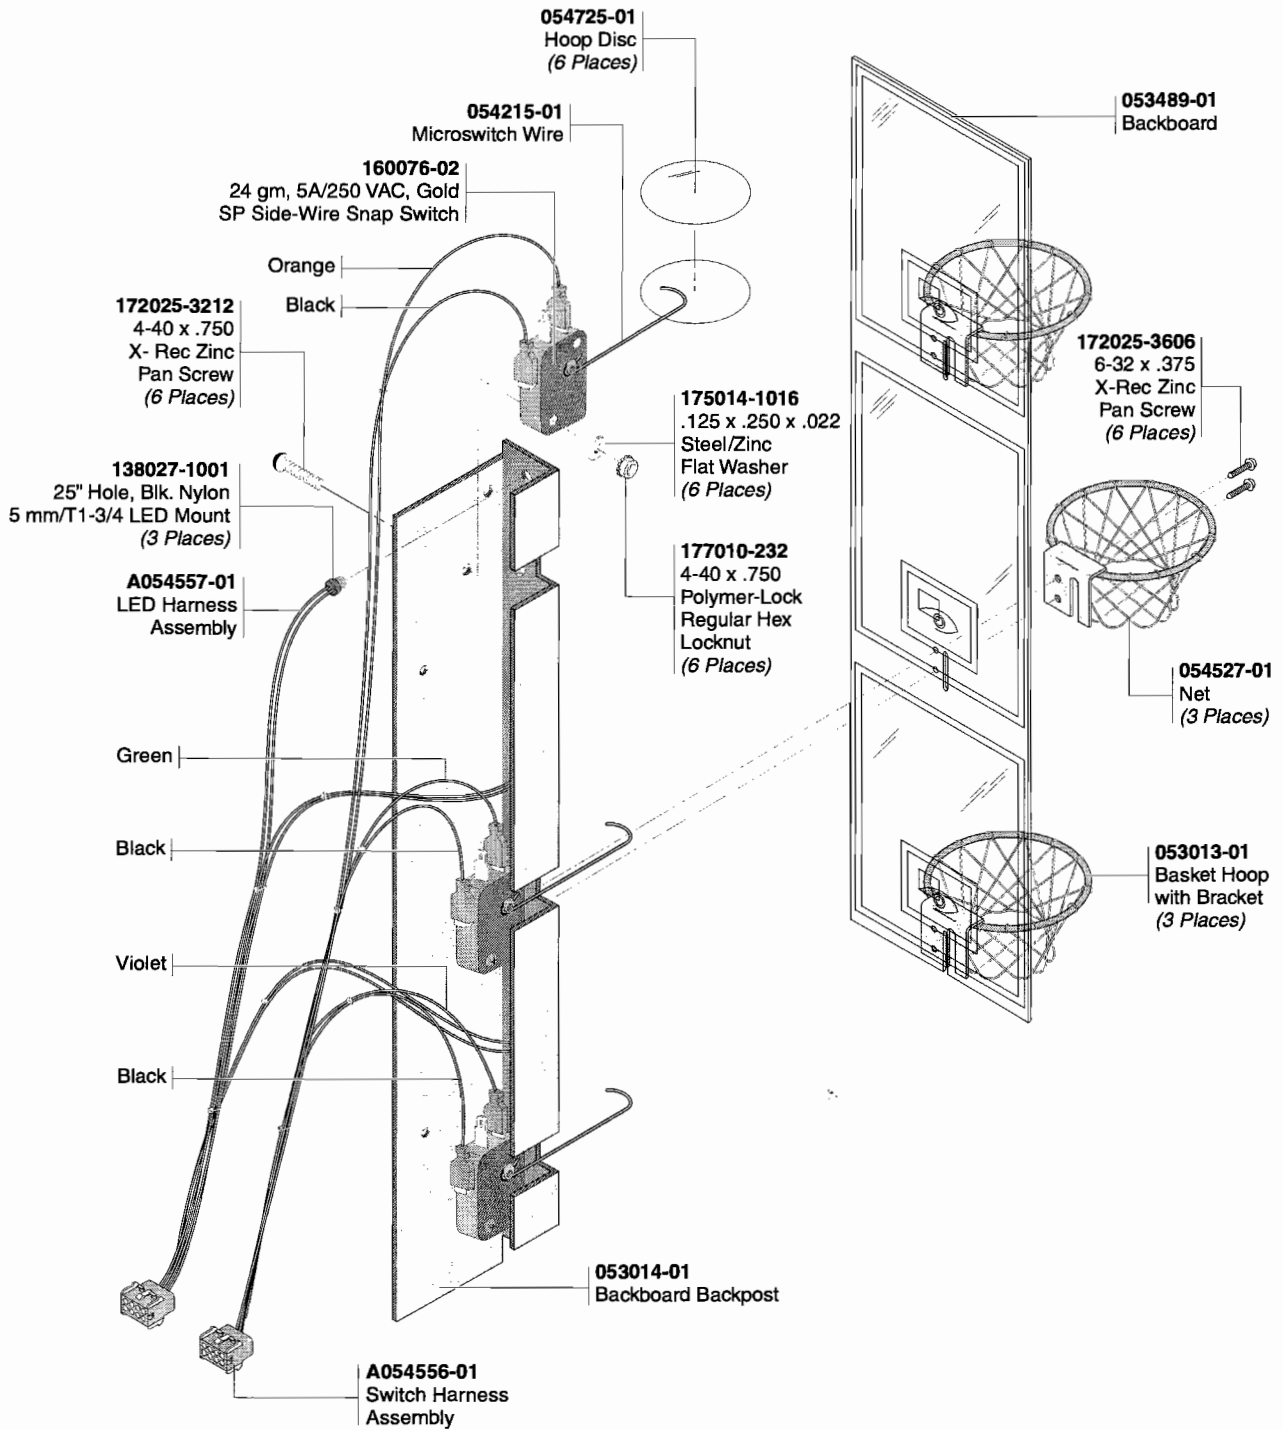


**Figure 4-3 Backboard Assembly**

A054219-01 Rev. A

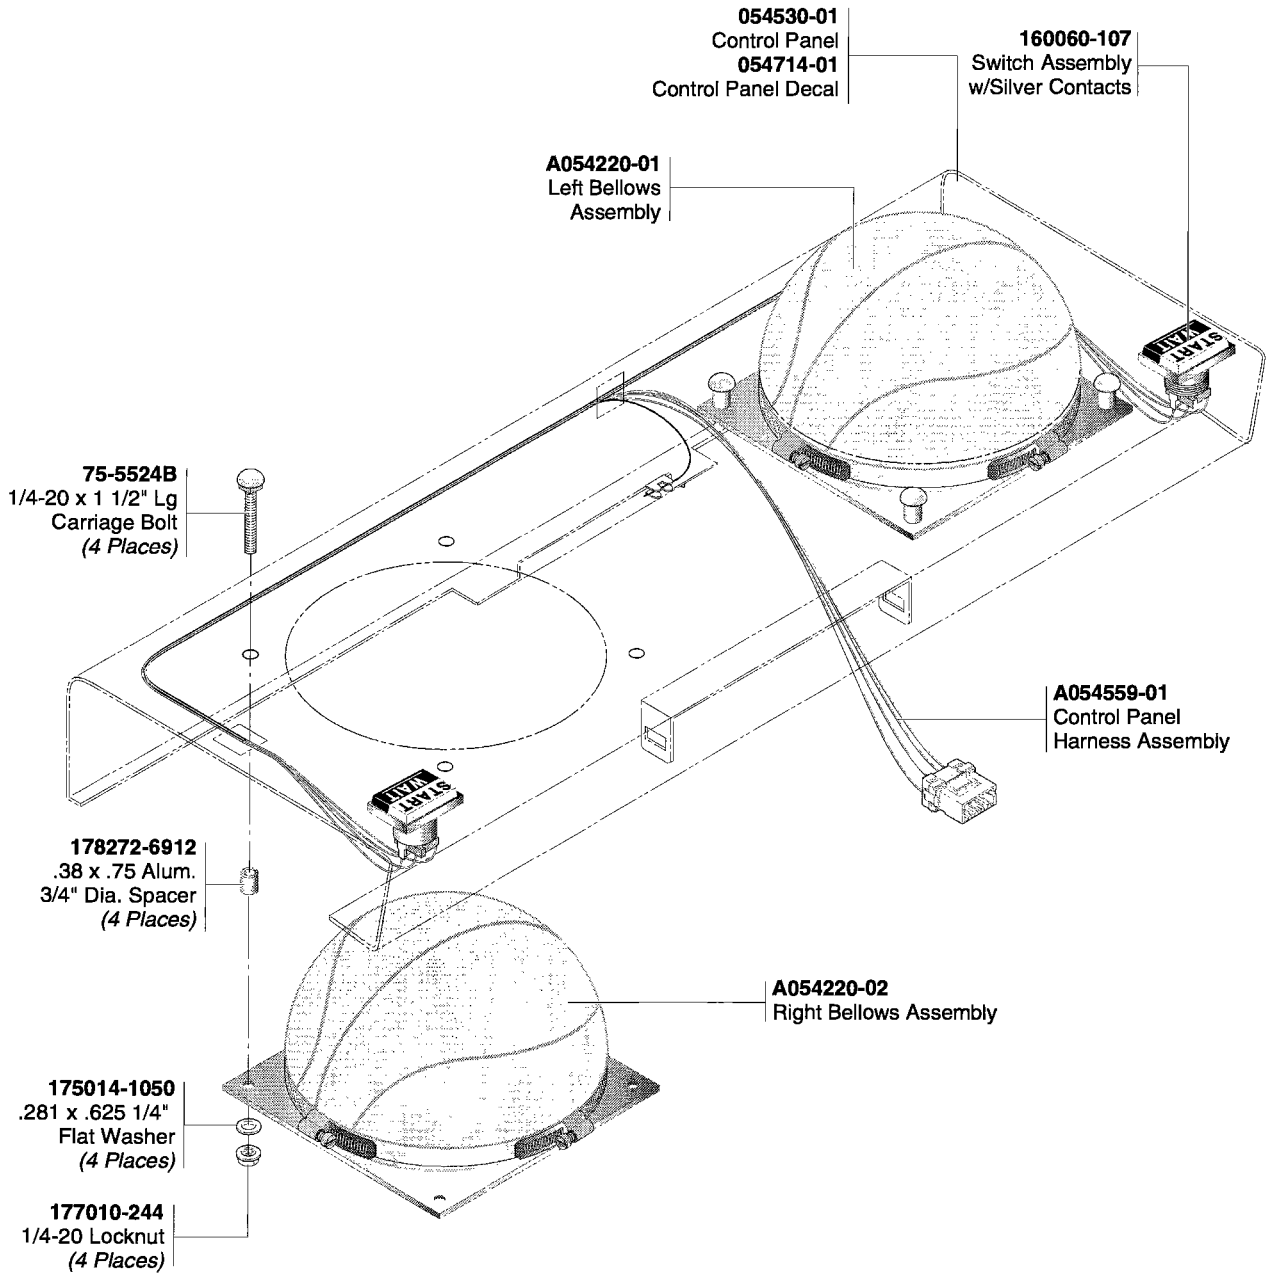

**Figure 4-4 Control Panel Assembly**


A054491-01 Rev. A

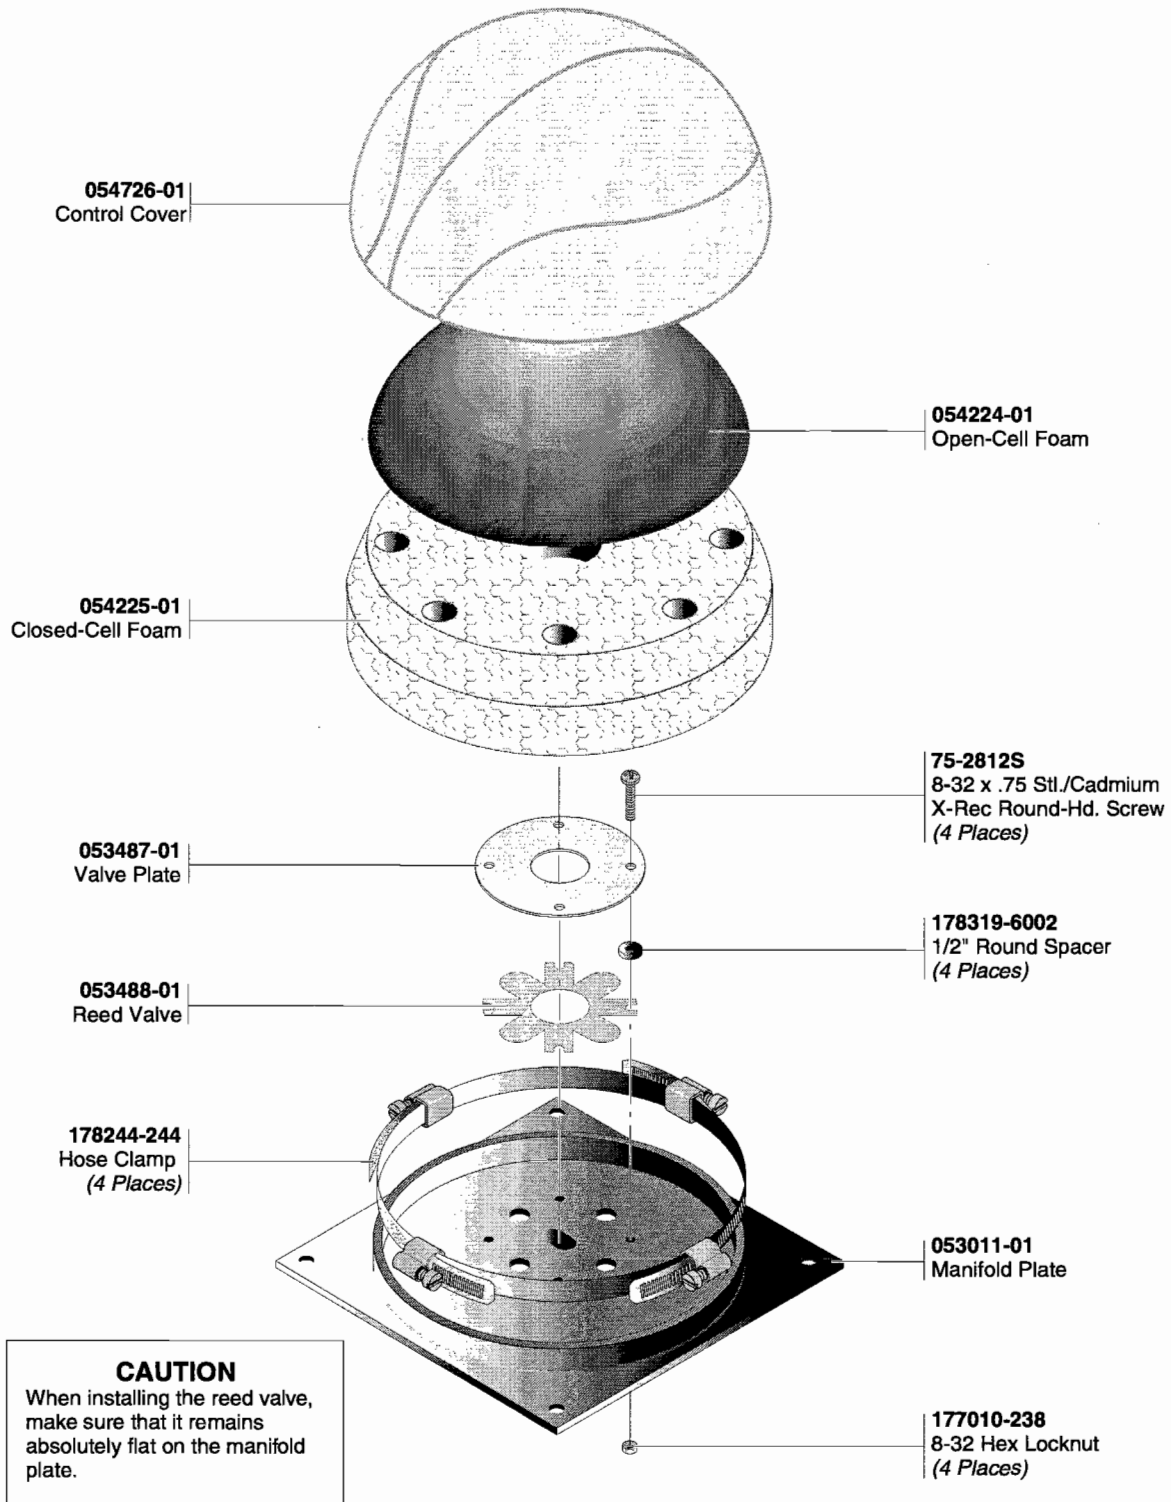

**Figure 4-5 Bellows (Basketball) Control Assembly**


A054220-01 (Left) or A054220-02 (Right) Rev. B



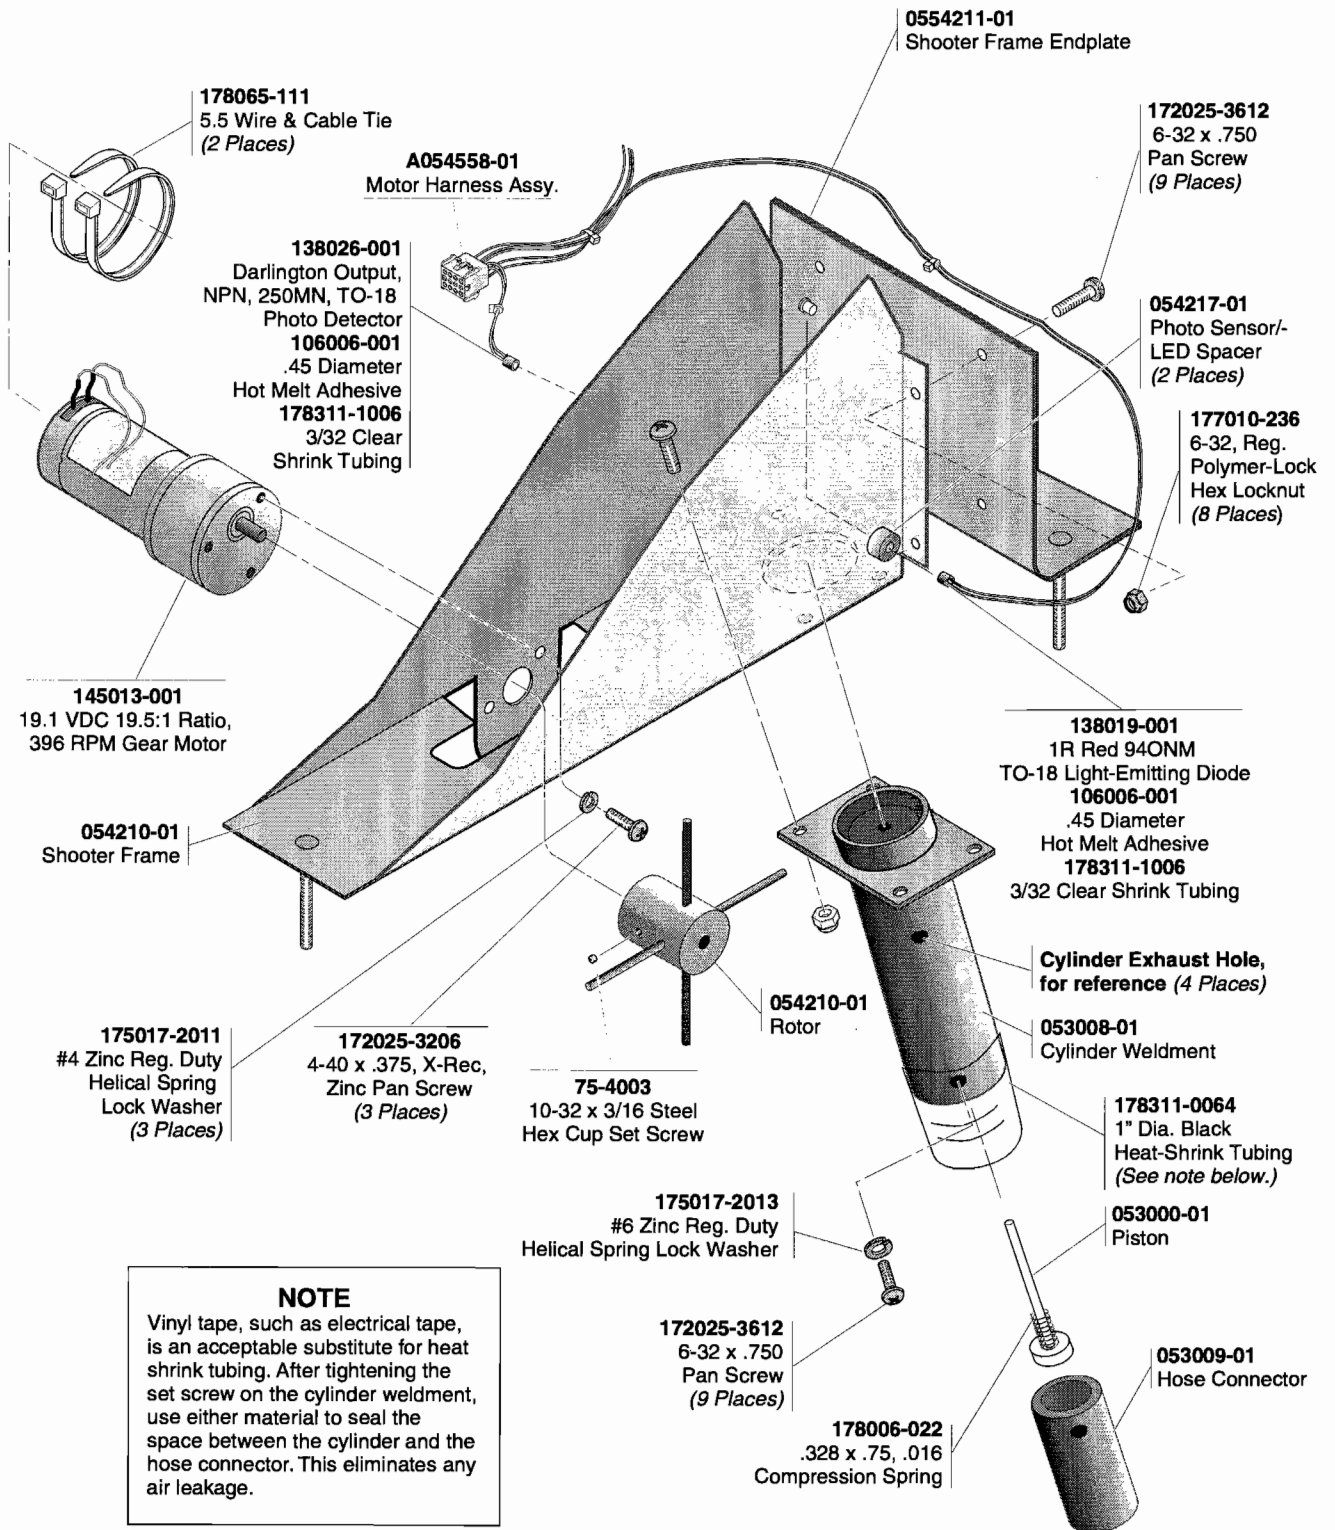


**Figure 4-6 Ball Shooter Assembly**

A054221-01 Rev. A

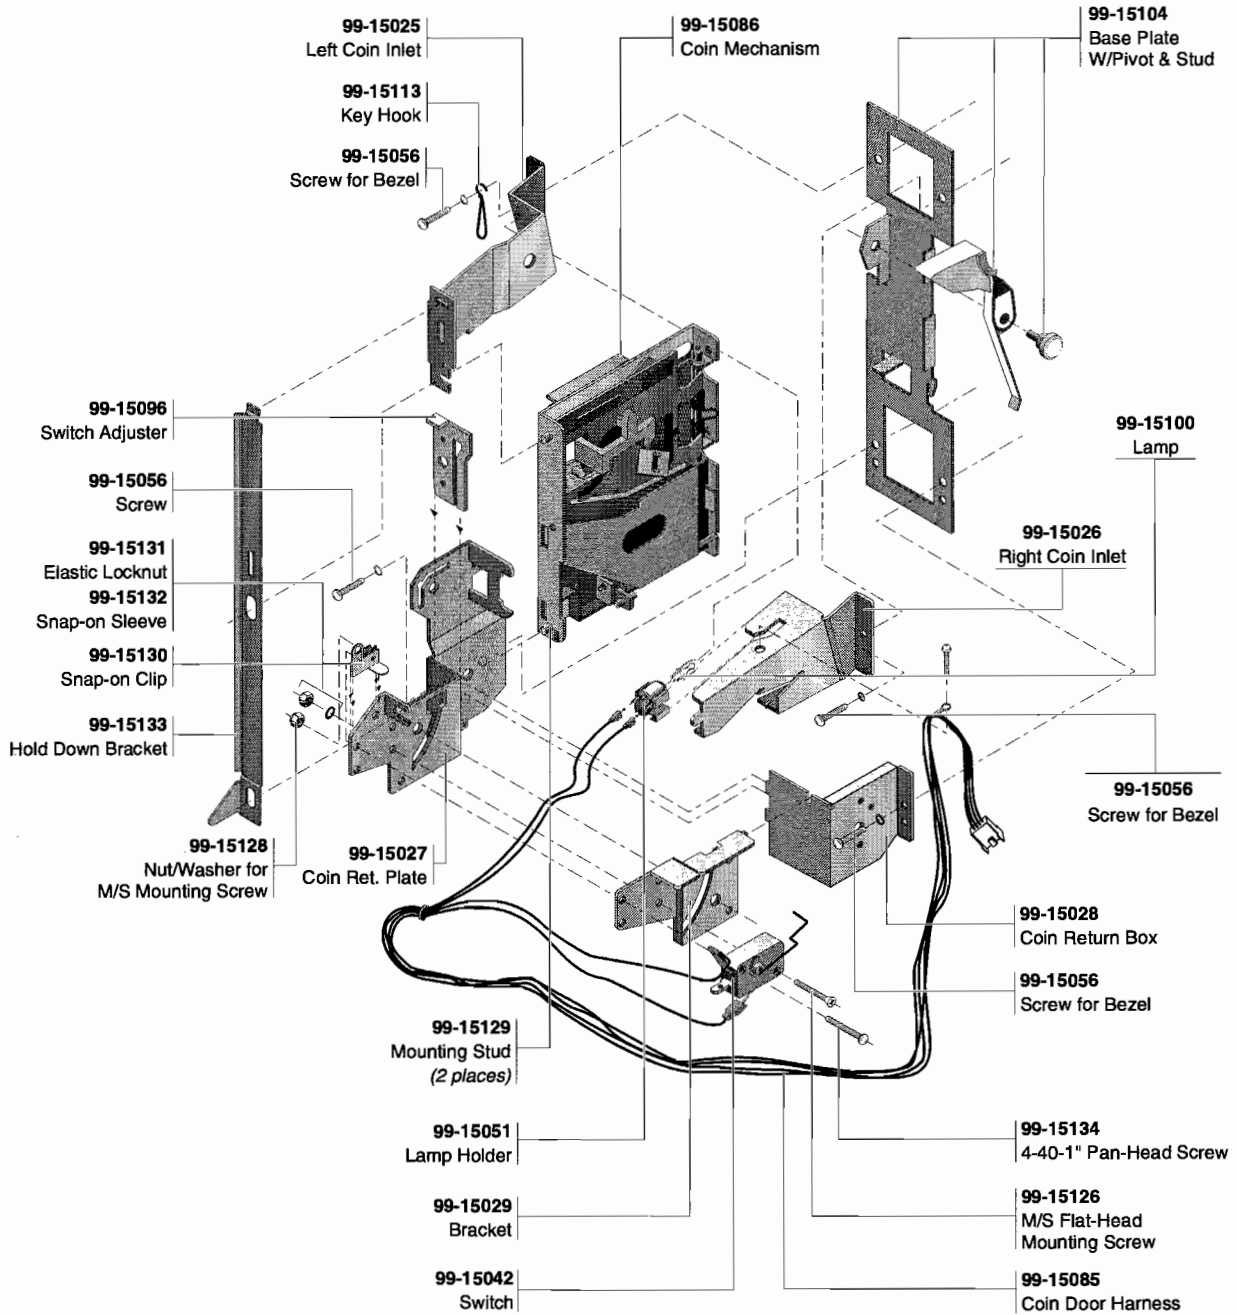


**Figure 4-7 Over/Under Coin Door Assembly**

171093-001

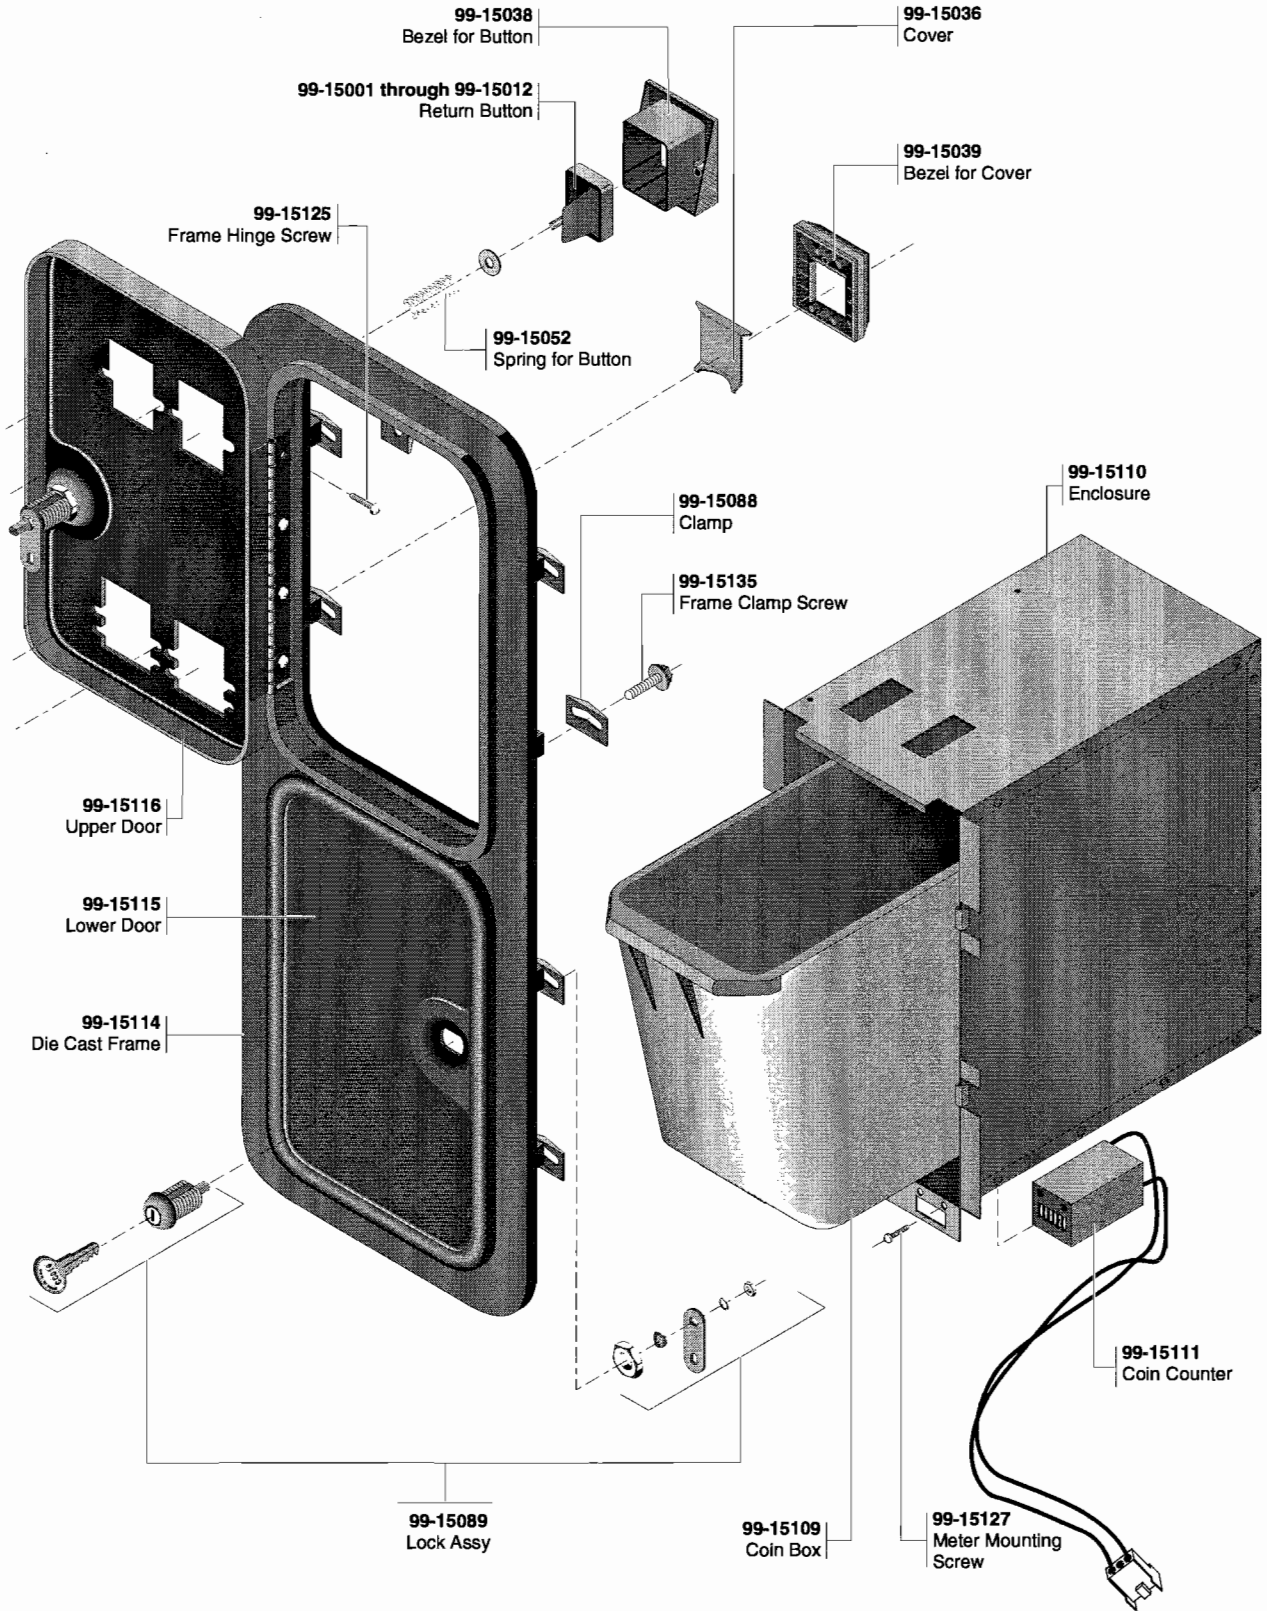

**Figure 4-7 Over/Under Coin Door Assembly**

171093-001

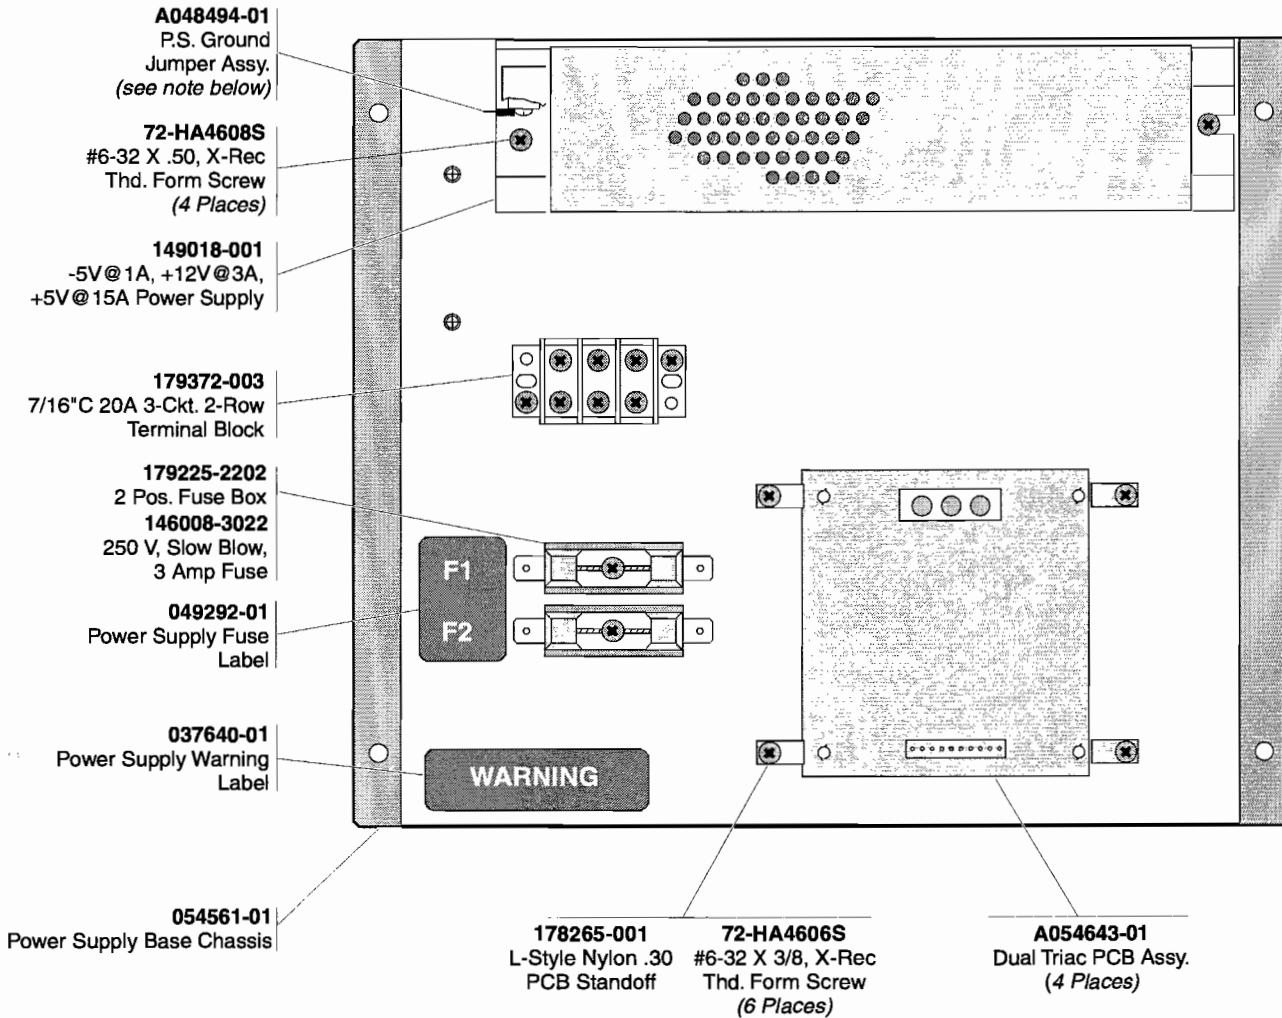

**NOTE**  
 Attach jumper from earth GND to signal GND on power supply terminal block.


**Figure 4-8 Power Supply Assembly**

A054562-01 Rev. A

# Wiring Diagrams

## INTRODUCTION

**T**HIS CHAPTER contains the wiring diagram for the Hoop It Up game and the Score Board PCB schematic diagram. (The assembly drawings are illustrated in Chapter 4, Parts Illustrations.) Copies of the complete Hoop It Up Game PCB schematic diagram are available free of charge by contacting our Customer Service Dept. See the inside front cover of this manual for the address and telephone numbers.

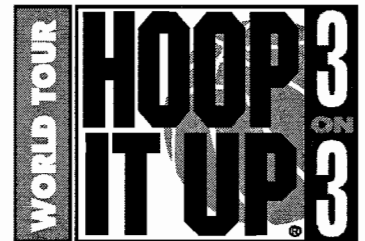


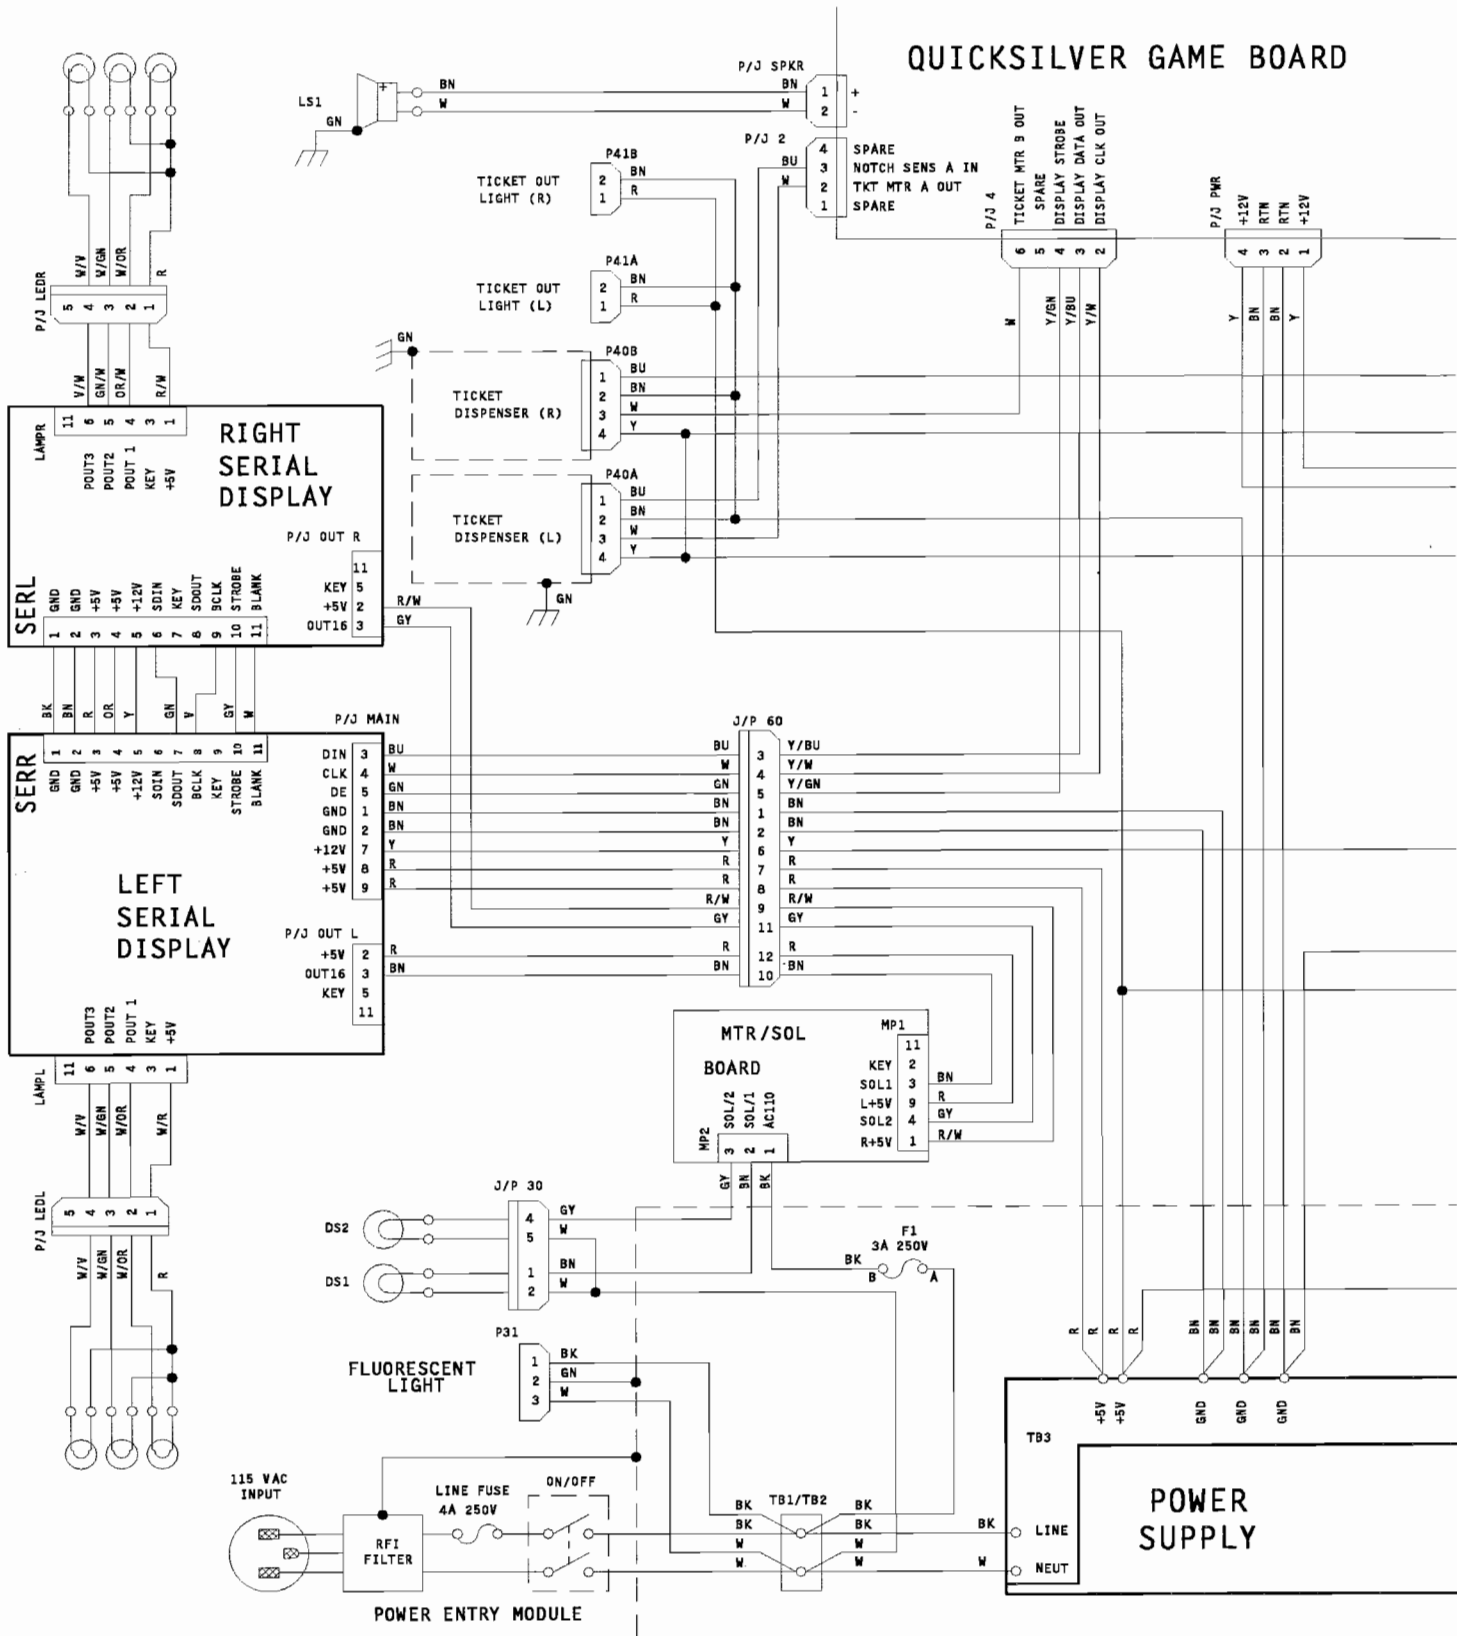


Figure 5-1 Hoop It Up Game Wiring Diagram

054551-01 Rev. A

# QUICKSILVER GAME BOARD

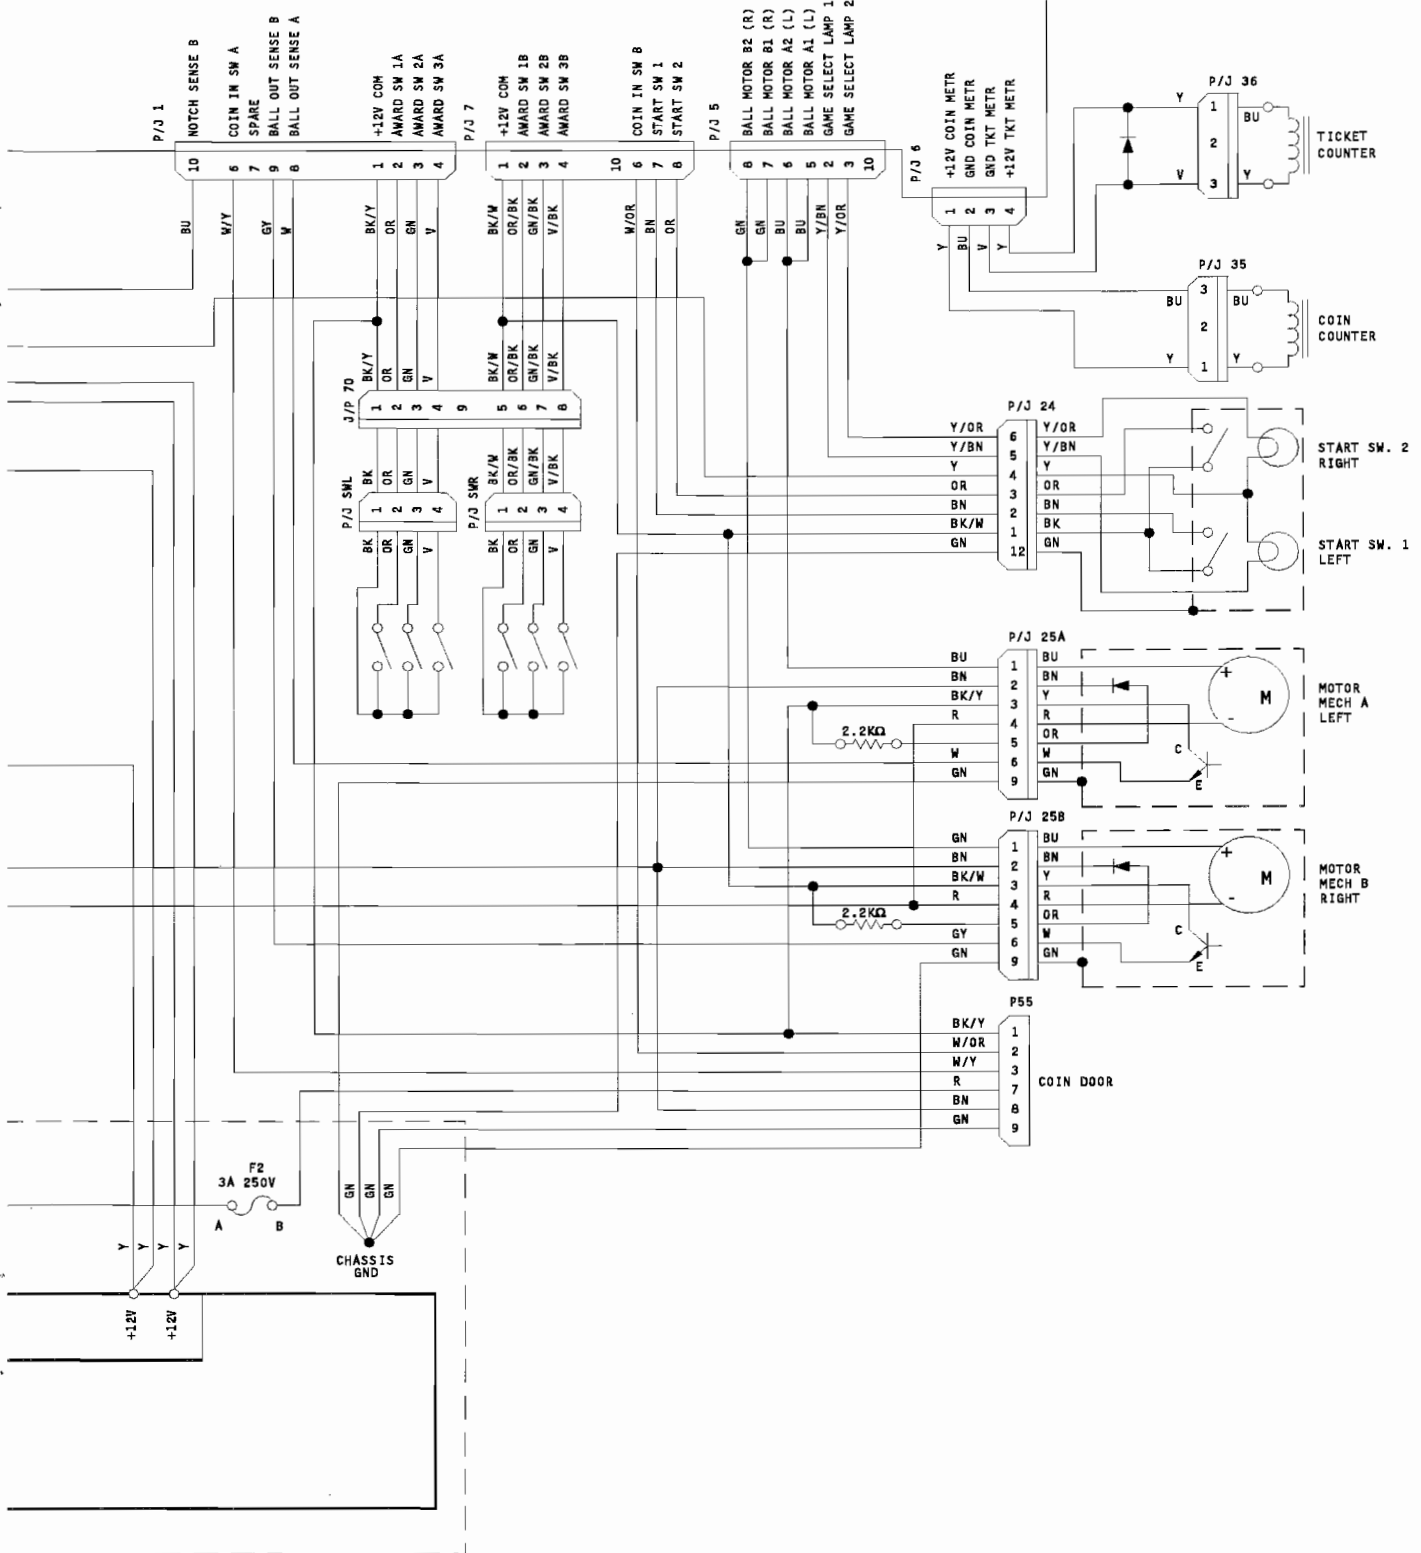

**Figure 5-1 Hoop It Up Game Wiring Diagram**  
054551-01 Rev. A




 
 



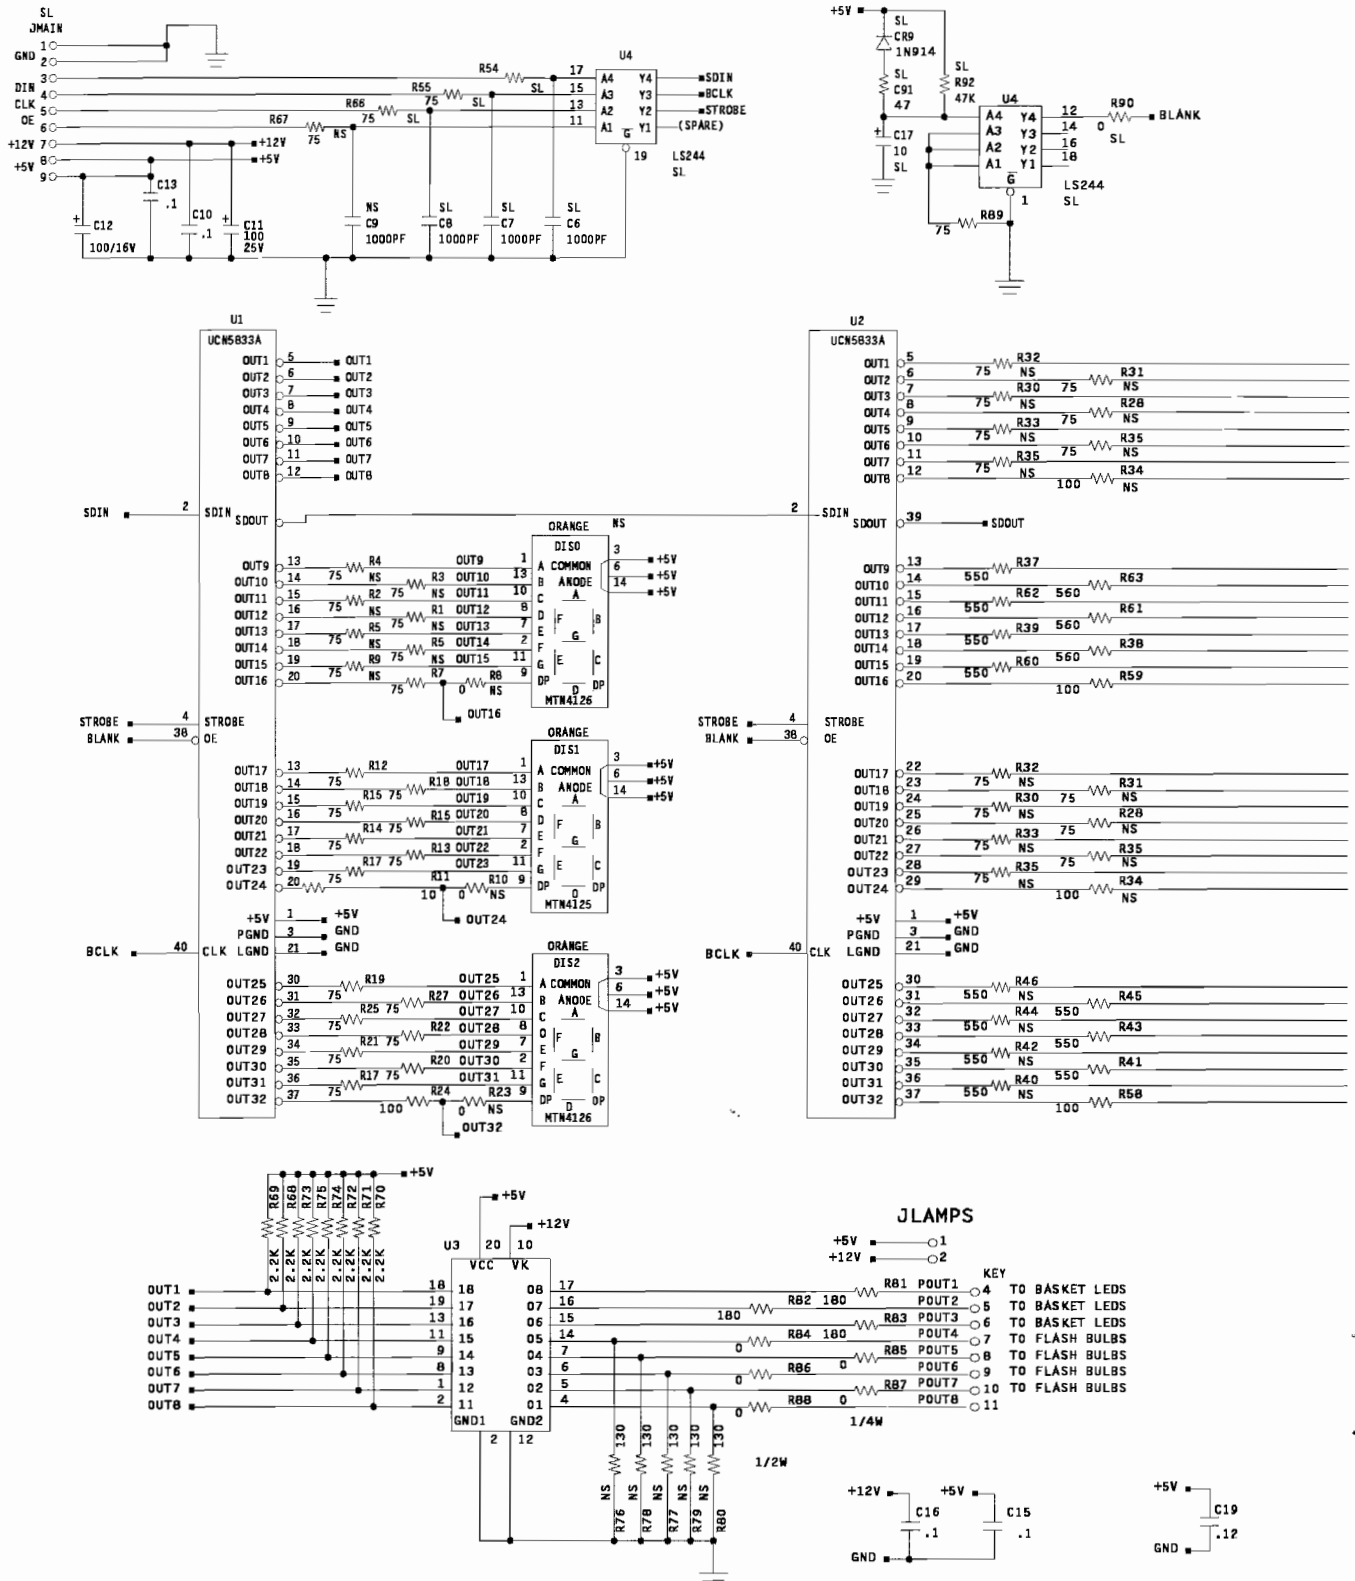


Figure 5-2 Score Board PCB Schematic Diagram

054305-01 Rev. A

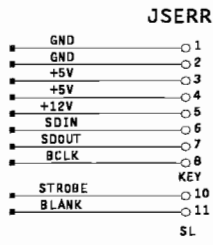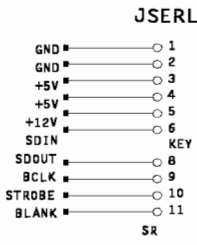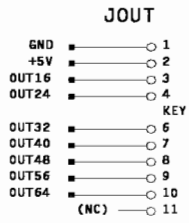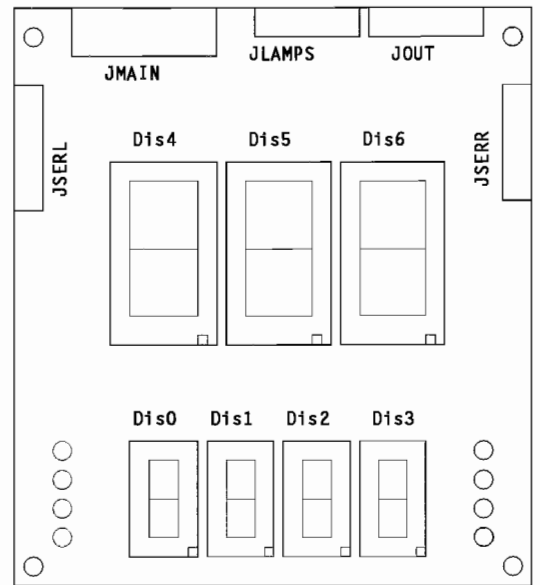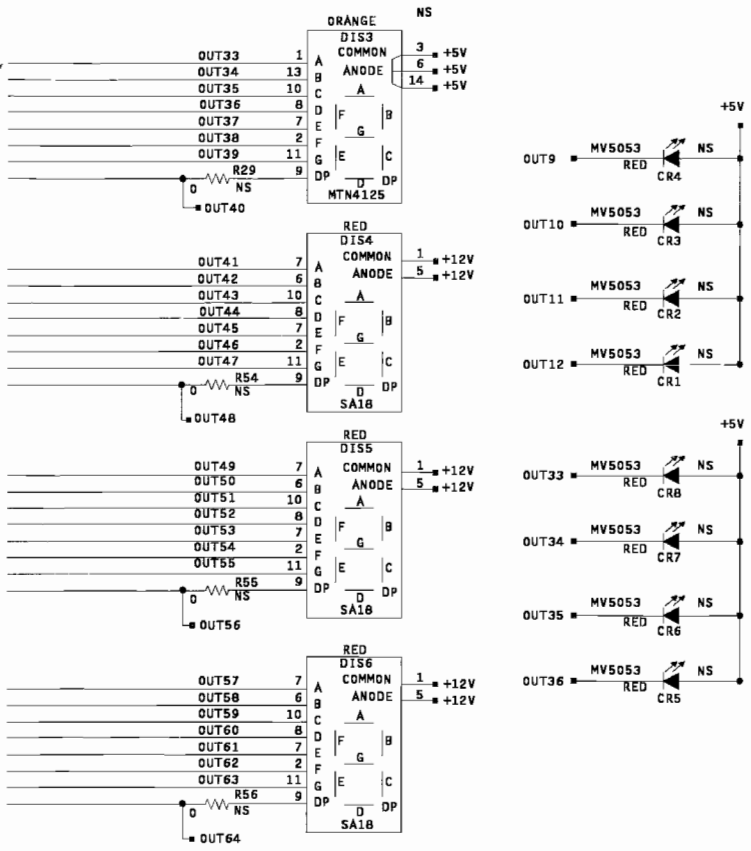

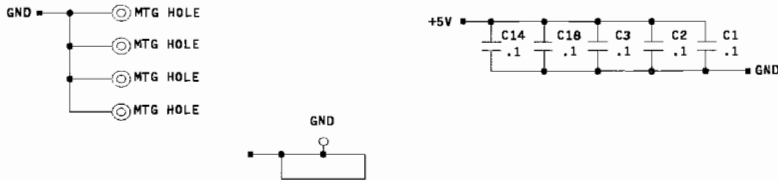

**NOTES FOR HOOP IT UP:**  
 NS - Do NOT stuff  
 SR - Stuff right side only  
 SL - Stuff left side only

**Figure 5-2 Score Board PCB Schematic Diagram**  
 054305-01 Rev. A

**N O T E S**



