

KICK

OPTION SWITCH SETTINGS

SWITCH NO. 1 - AT B3 - LOCATED ON SOUND I/O P/C. BOARD

	SW#1	SW#2	SW#3	SW#4	SW#5	SW#6	SW#7	SW#8	SW#9	SW#10
PLAY MUSIC DO NOT PLAY MUSIC	ON OFF	NOT USED	NOT USED	NOT USED	NOT USED	NOT USED		NOT USED	NOT USED	
MINI COCKTAIL TABLE								ON OFF		
FREEZE VIDEO NORMAL OPERATION										ON OFF

SWITCH NO. 3 - AT D14 - LOCATED ON SOUND I/O P.C. BOARD

	SW#1	**SW#2	**SW#3	**SW#4
NORMAL OPERATION SOUND I/O DIAGNOSTIC MODE				
	OFF ON			
NORMAL OPERATION RAM / ROM TEST INDICATES TEST RESULTS VIA YELLOW LED ON SOUND I/O BOARD: FAST FLASH = BAD ROM SLOW FLASH = BAD RAM			OFF ON	
NORMAL OPERATION OSCILLATOR TEST			OFF ON	
NORMAL OPERATION FILLER TEST				OFF ON

*THIS SWITCH NOT USED ON UPRIGHT MODELS.

**NO EFFECT IF SW#1 OF SWITCH NO. 3 IS IN THE "OFF" POSITION.

THE REMAINDER OF KICK'S MOST COMMON OPTION SETTINGS
ARE CONDUCTED DURING THE MACHIN SETUP PORTION OF THE SELF-TEST MODE.
SIMPLY FOLLOW THE ON-SCREEN INSTRUCTIONS TO MAKE ANY ADJUSTMENTS YOU FEEL ARE NECESSARY.