




rowe international, inc.


A SUBSIDIARY OF TRIANGLE INDUSTRIES, INC.
1500 UNION AVE. S.E., GRAND RAPIDS, MICH. 49502, TEL. (616) 243-3833

L-5627A - L-5627B - L-5678A Power Supply; WR Series Wall-Ette & Seeburg Consolettes INSTALLATION INSTRUCTIONS


The Wiring diagram below indicates the proper method for connecting the WR-series Wall-ettes and L-5627A power supply to the phonograph or hideaway. This diagram also includes proper connections for L-5627B power supply and Seeburg Consolettes. Instructions for connecting L-5678A secondary power supply are also included.

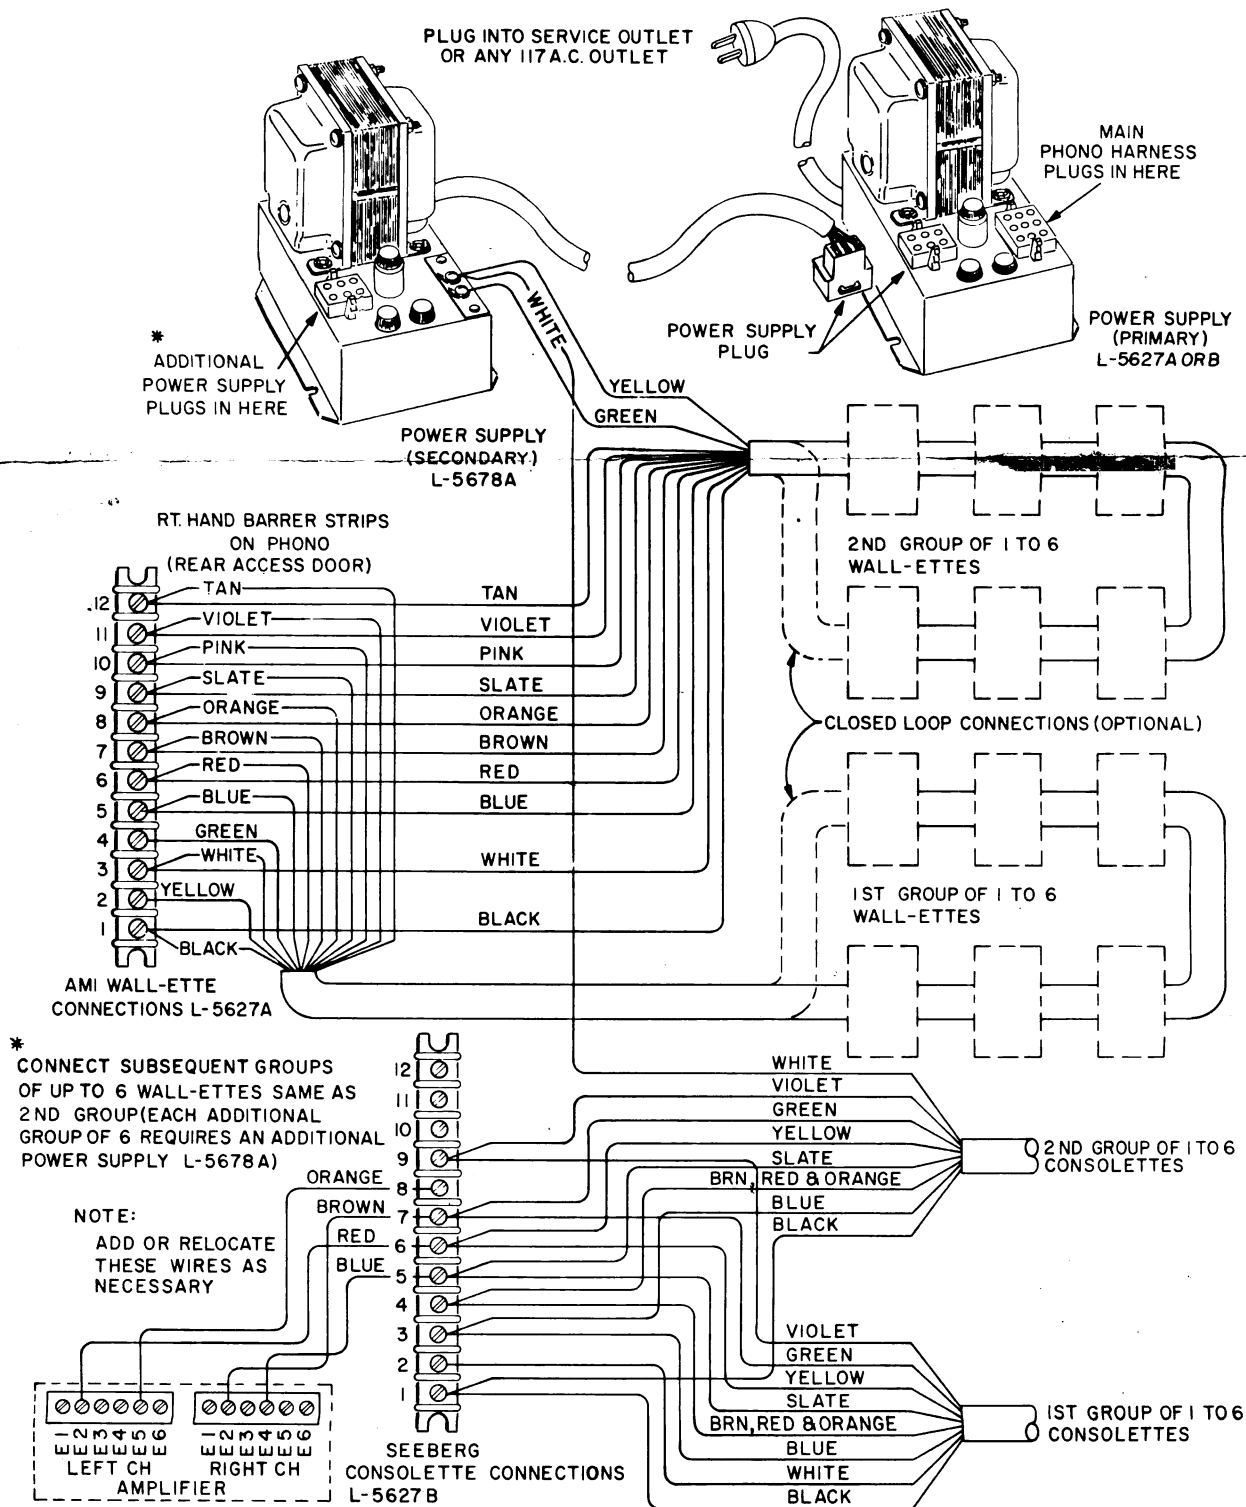


SCHEMATIC L-5627A

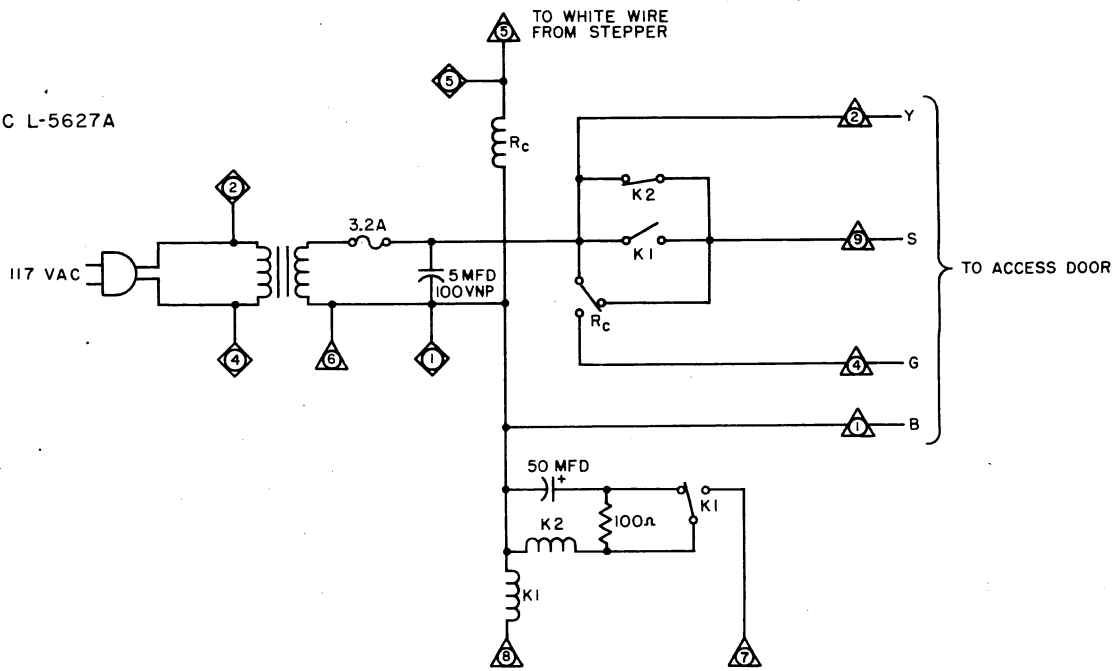

SCHEMATIC L-5627B

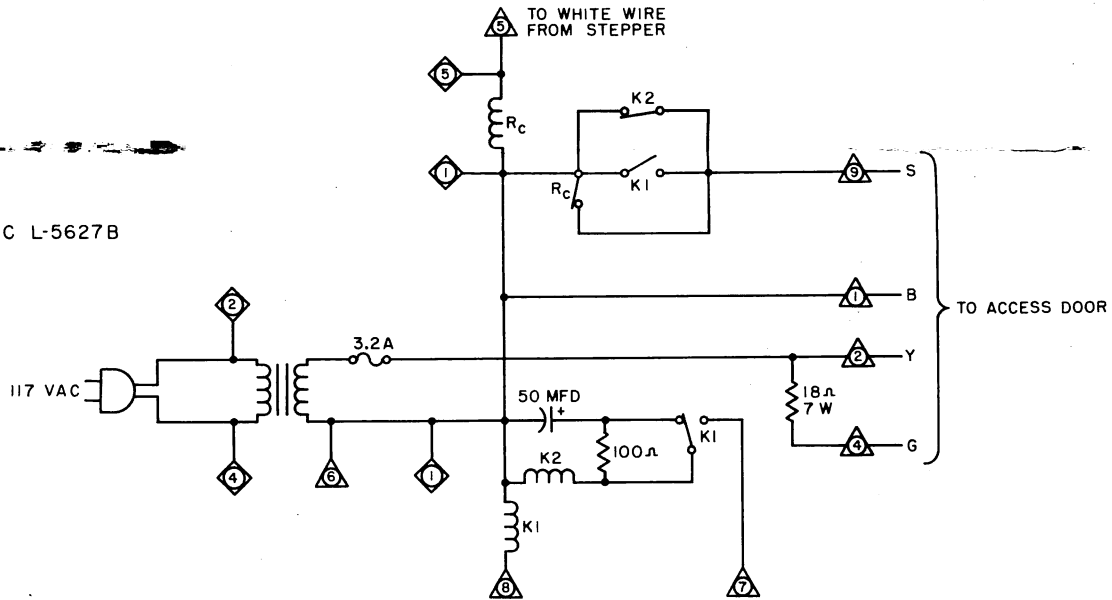

SCHEMATIC L-5678A

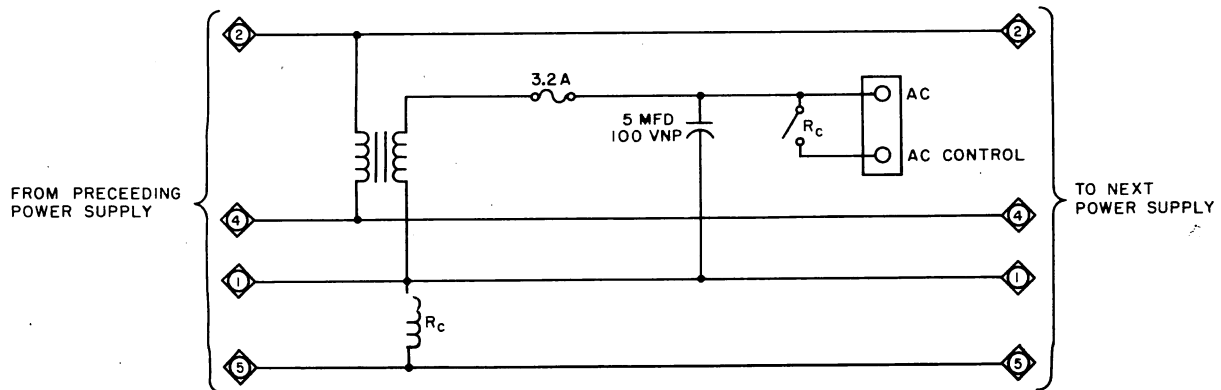


① 6 PIN CONNECTOR

② 9 PIN CONNECTOR FROM MAIN HARNESS

STEREO SOUND SYSTEM CHART

FOR STEREO PHONOGRAPH, EXTENSION SPEAKERS & WALL-ETTE SPEAKERS

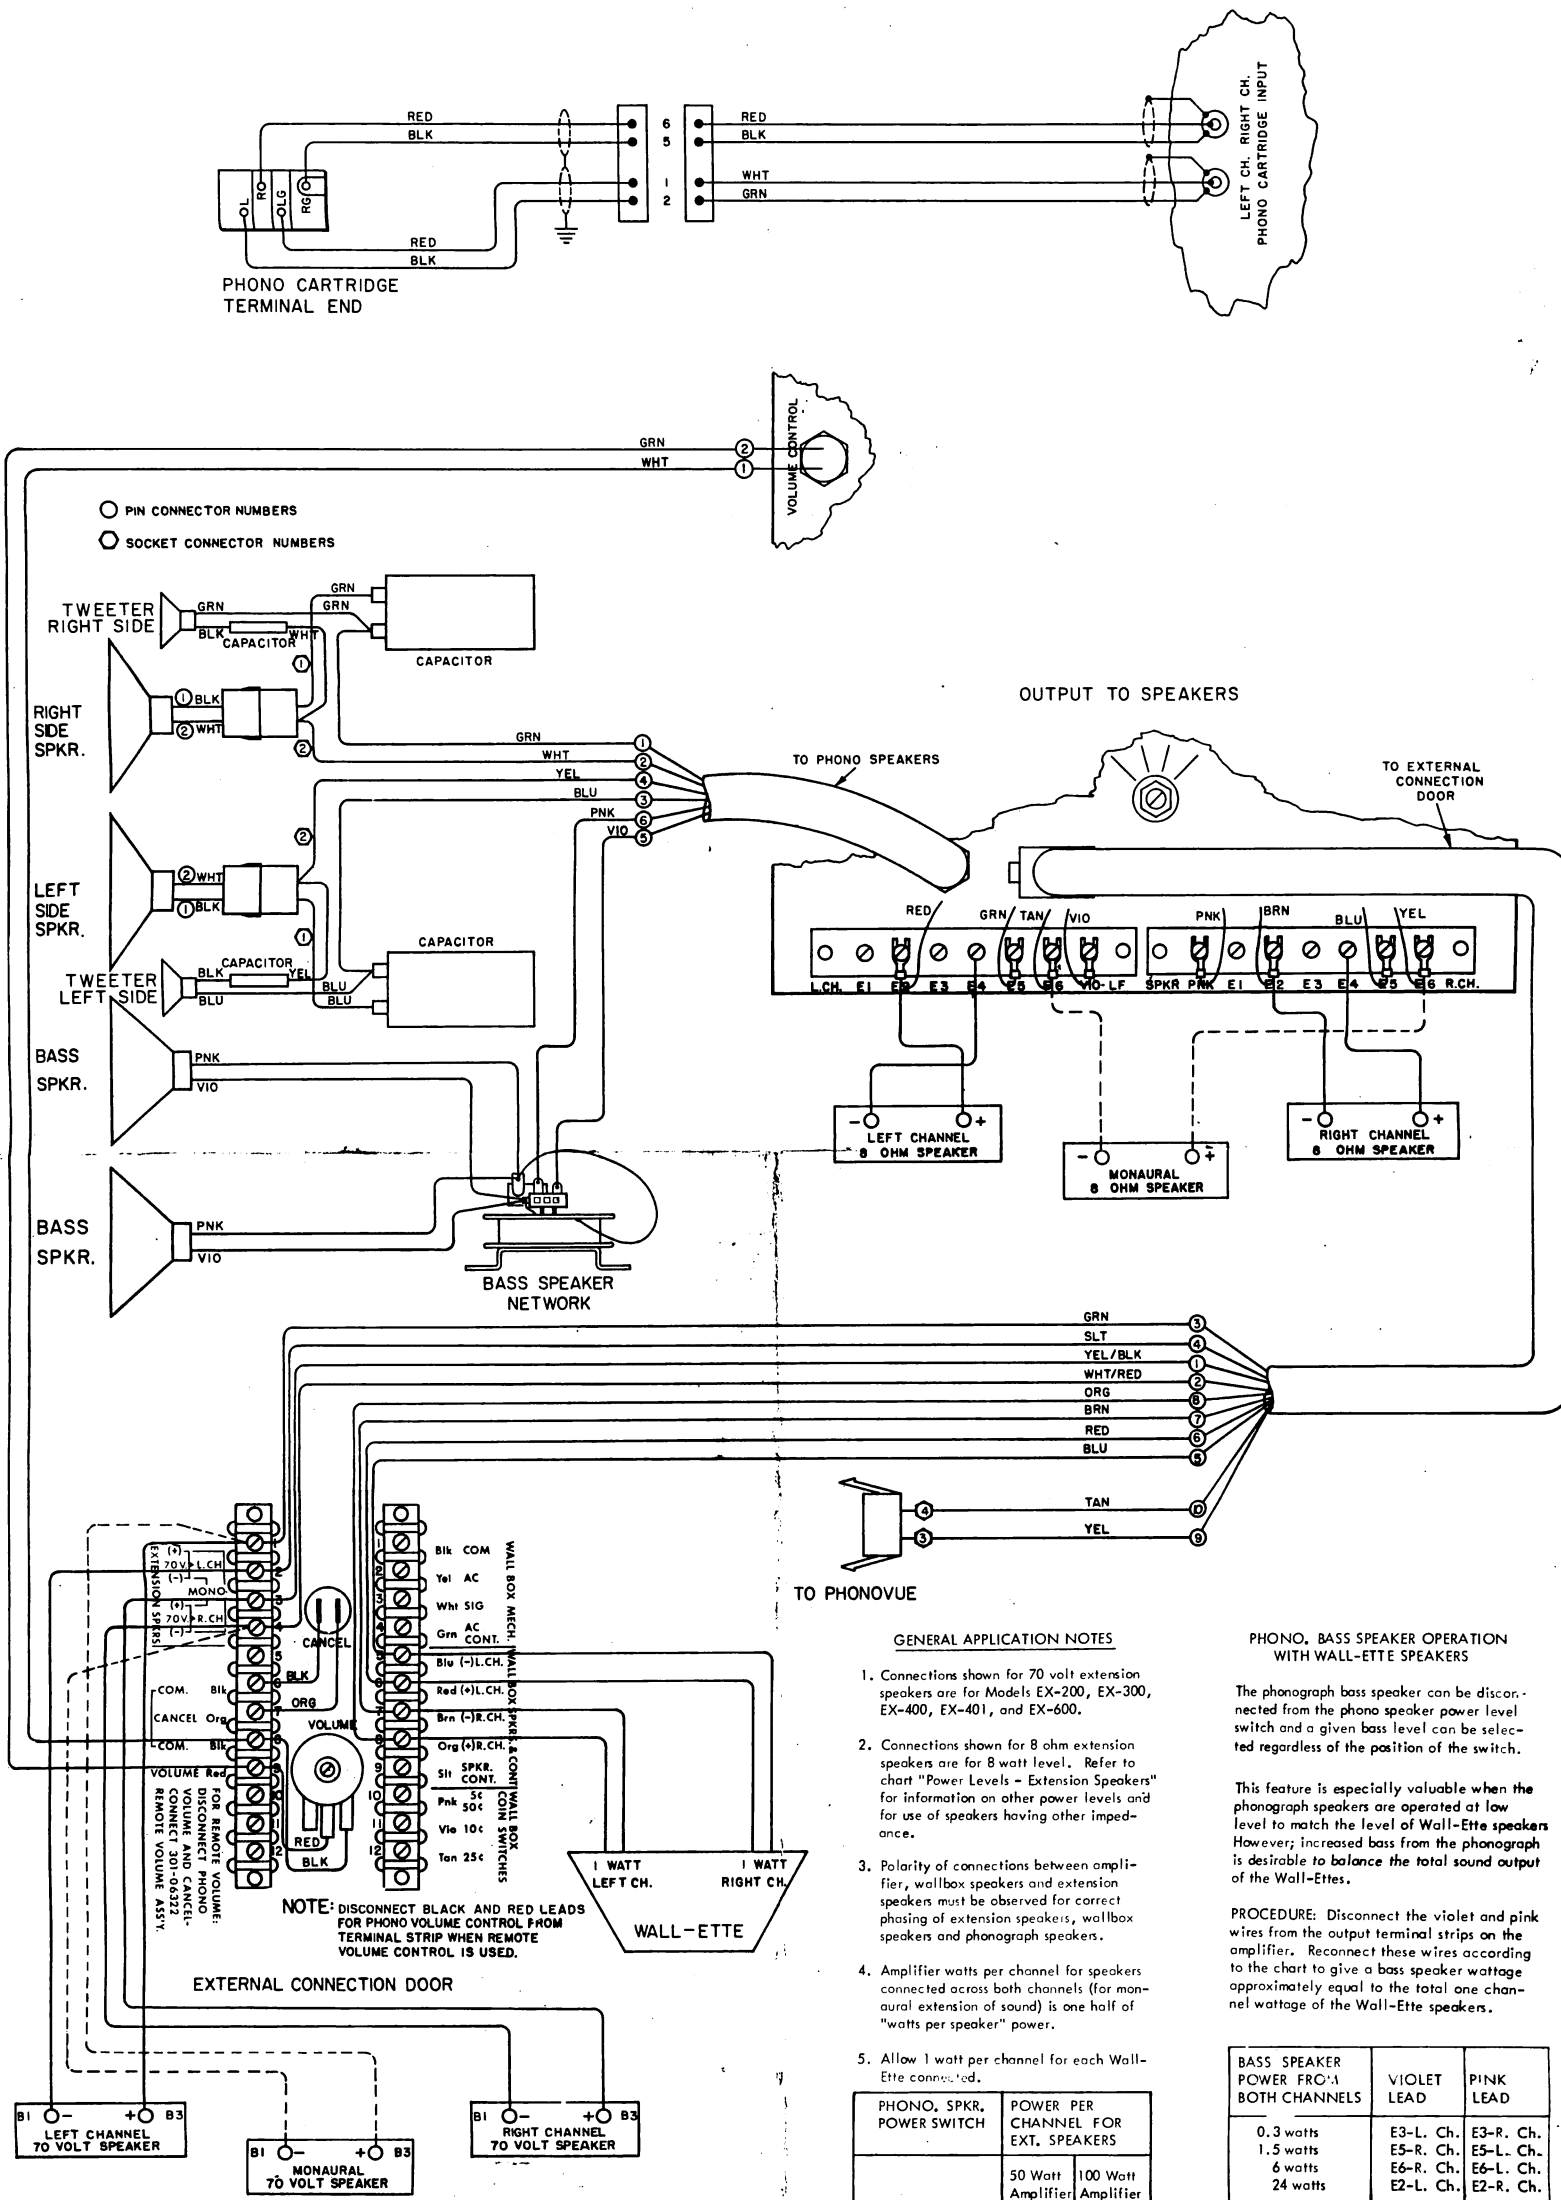

Rowe international, inc.
 A SUBSIDIARY OF TRIANGLE INDUSTRIES, INC.
 1500 UNION AVE. S.E., GRAND RAPIDS, MICH. 49502, TEL. (616) 243-3833

200-14329
 REV. 6-27-72