

15 1981

SEGA[®]/Gremlin[®]

SERVICE NOTE

SPACE ODYSSEY

EFFECT:

001 12/17/81

NUMBER:

An error has been found on page 62 of the Owner's Manual (P/N 420-0610), Drawing No. 800-3160, Sheet 7 of 7, Zone C6, SPACE ODYSSEY VIDEO I BOARD. The IC device U5 (LS14), should be corrected to read U6 (LS74).

FLIPPERS.COM

Gremlin - Space Odyssey +
SPACE FURY

To set game for 50¢ - per play
both sides locate blue dip switch
(SW. 2) on C.P.U. board.

SW 1	-	on
2	-	on
3	-	off
4	-	on
5	-	on
6	-	on
7	-	off
8	-	on

For 25¢ per play

SW 1 - on	SW 5 - on
SW 2 - on	SW 6 - on
SW 3 - off	SW 7 - off
SW 4 - off	SW 8 - off