


TO REMOVE CARD CAGE.

- 1) Open Card Cage door.
- 2) Slide the cage out carefully, but DO NOT attempt to pull it all the way out yet.
- 3) When connectors (at the rear end of the cage) become visible disconnect the following connectors from the PC Boards:

50 PIN	I/O PC Board
40 PIN	Laser Disc Player
7 PIN	Audio
6 PIN	Video
RCA Plugs (2 each)	Audio
15 PIN	DC Power
RCA Plug	Video

- 4) If necessary, the PC Boards can be rotated to provide access for removal of connectors by loosening thumbscrew stops, both top and bottom.
- 5) Cage can now be carefully removed.

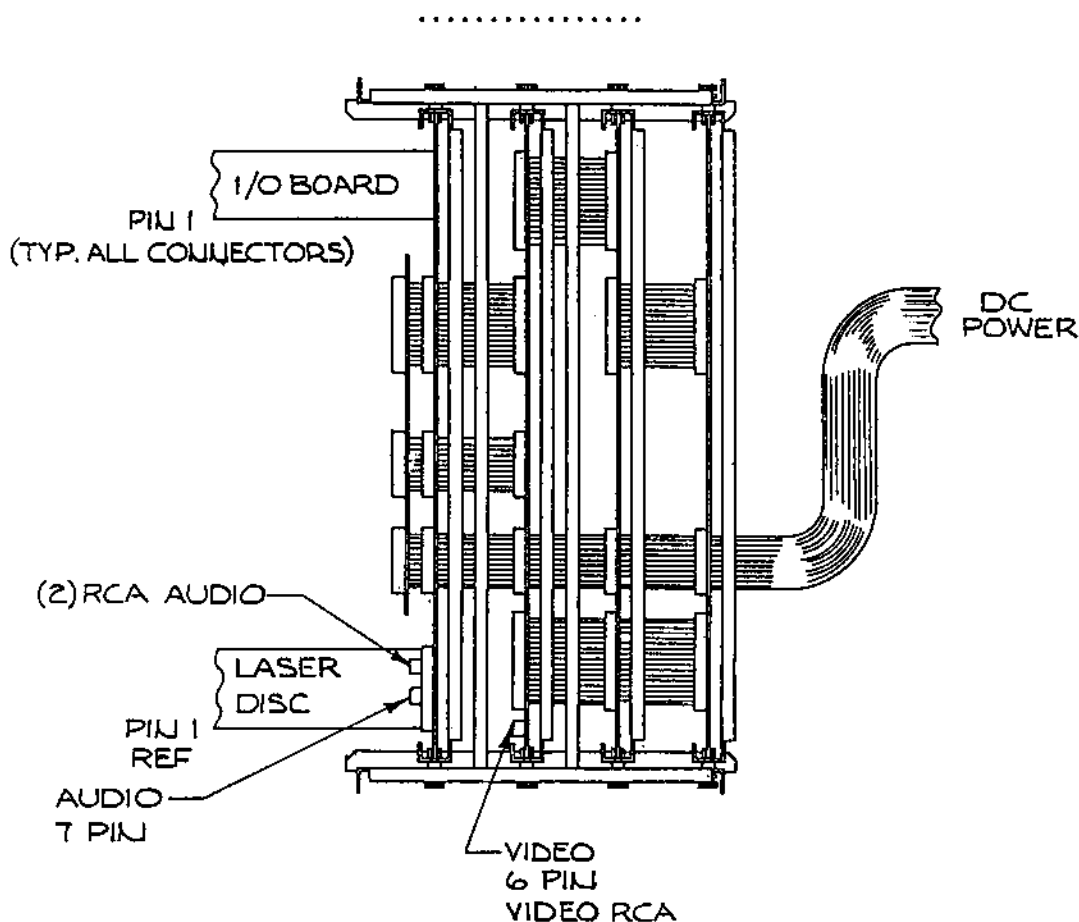

TO RE-INSTALL CARD CAGE.

- 1) Engage cage in bottom guides.
- 2) While supporting cage (with bottom of cage resting on bottom guides), reconnect connectors mentioned in removal procedure. PC Boards may be pivoted to provide access.
- 3) Engage top guides, and slide card cage into the enclosure.
- 4) Secure all thumbscrew stops to hold PC Boards in place (both top and bottom).

NOTE: Please exercise great caution to insure that no cables are damaged.