

T I M B E R

O P T I O N S W I T C H S E T T I N G S

//////////////////SWITCH NO. 1 - AT B 3 - LOCATED ON SOUND I/O P.C. BOARD//////////////////

DURING GAME PLAY:	SW#1	SW#2	SW#3	SW#4	SW#5	SW#6	SW#7	SW#8	SW#9	SW#10
	NOT USED	NOT USED		NOT USED	NOT USED	NOT USED		NOT USED	NOT USED	
** ATTRACT MODE SOUNDS OFF ATTRACT MODE SOUNDS ON	OFF ON									
UPRIGHT COCKTAIL TABLE	OFF ON									
** NORMAL OPERATION FREEZE VIDEO	OFF ON									

//////////////////SWITCH NO. 3 - AT D 14 - LOCATED ON SOUND I/O P.C. BOARD//////////////////

	SW#1	*SW#2	*SW#3	*SW#4
** NORMAL OPERATION SOUND I/O DIAGNOSTIC MODE	OFF ON			
** NORMAL OPERATION RAM/ROM TEST INDICATES TEST RESULTS VIA YELLOW L E D ON SOUND I/O BOARD: FAST FLASH = BAD ROM <u>SLOW FLASH = BAD RAM</u>	OFF ON			
** NORMAL OPERATION OSCILLATOR TEST	OFF ON			
** NORMAL OPERATION FILTER TEST	OFF ON			

* NO EFFECT IF SW#1 OF SWITCH NO. 3 IS IN THE "OFF" POSITION.
** FACTORY RECOMMENDED SETTINGS.

PART NO. M051-00B60-A007

THE REMAINDER OF YOUR NEW GAME'S MOST COMMON OPTION SETTINGS ARE CONDUCTED DURING THE
MACHINE SETUP PORTION OF THE SELF-TEST MODE AND WILL BE COVERED IN DETAIL
IN THAT SECTION OF YOUR MANUAL.