



- Chip select
- 6. Link input pad 1 to 3k pin 1 (LOW) 4A Pin 11 (HIGH)
 - 7. Link input pad 2 to lifted pin 19 of 4L ADDR 10 HIGH
 - 8. Link input pad 3 to 9N pin 4 " LOW

EXPANSION BOARD