

M'S PUCKMAN 2532 SINGLE RAIL

M'S	PUC	1 MP1	31E0	(01)	F3	3E	00	ED
007 M'S	PUC	2 MP2	3778	(02)	AF	32	D4	4D
014 M'S	PUC	3 MP3	3761	(03)	FD	7E	00	DD
021 M'S	PUC	4 MP4	326D	(04)	21	00	00	01
028 M'S	PUC	5 MP5	397B	(05)	82	8B	73	8E
035 M'S	PUC	6 MP6	313E	(06)	02	CE	FC	FC

1. LINK PIN 5 OF μP TO 7N|13.
2. CUT TRACK TO PIN 13 OF 7N.
3. CUT TRACK TO 6M|20 AND 6K|20.
4. LINK 7N|5 TO 6K|20.
5. LINK 7N|6 TO 6M|20.

SWITCHES & ~~INPUTS~~ ^{INPUTS} AS PER PACMAN.

EXCEPT SW7 WHEN ON GIVES FRAME DISPLAY.

PULSE CREDIT INPUT TO STEP THRO' GAME STAGES.