



**Kurz-Kasch, Inc.**


Electronics Division  
Box 1246 • 2271 Arbor Blvd.  
Dayton, Ohio 45439  
Telephone (513) 299-0990

# Operating Instructions

For Model #370AB/171C or 287C

CENTIPEDE

ATARI

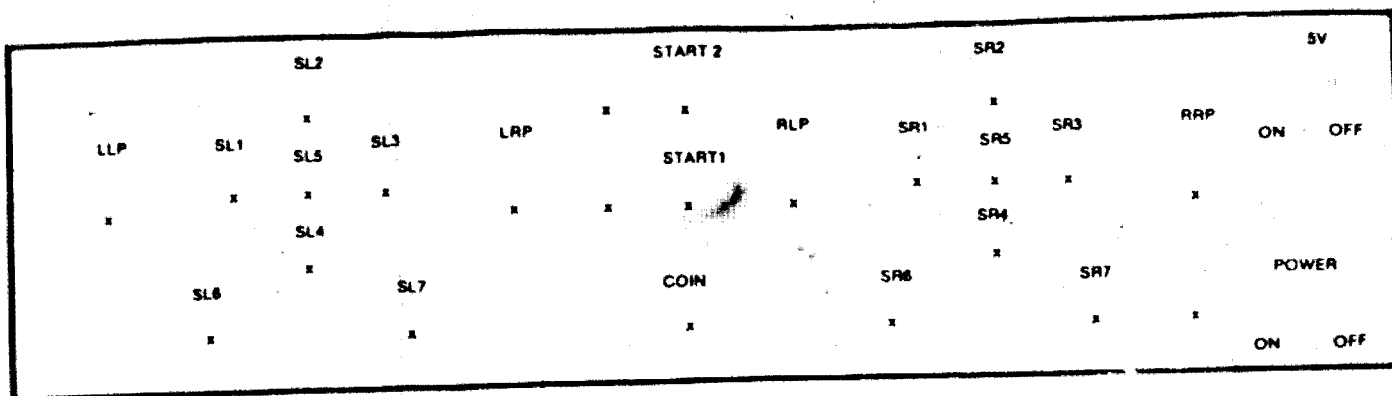

1. Insert 370B program card into "B" connector of TF-650, number side up.
2. Insert 370A program card into "A" connector of TF-650, number side up.
3. Insert 171C or 287C card into 25-pin connector on TF-650, number side up.
4. Insert GAME BOARD into 171C or 287C.
5. Connect 24-pin ribbon cable connector to J19 on GAME BOARD edge connector with RED DOT UP.
6. Connect speaker across RED & BLACK 6 inch leads on 370A card.
7. Slide 5 VOLT switch to ON.
8. Slide POWER switch to ON.
9. Controls are:

COIN is COIN CENTER

SL7 is COIN LEFT

SR6 is COIN right

START 1 is 1 PLAYER (start 1 LED is next to START 1 button)

START 2 is 2 PLAYER (start 2 LED is next to START 2 button)

SR1 is 1 or 2 PLAYER LEFT	}
SR2 is 1 or 2 PLAYER UP	
SR3 is 1 or 2 PLAYER RIGHT	
SR4 is 1 or 2 PLAYER DOWN	

By using these 4 switches, all inputs are checked. 45° angle movement can be made by pushing these 2 switches simultaneously....SR1-SR2

SR2-SR3

SR3-SR4

SR4-SR1

SR5 is 1 PLAYER FIRE

SL5 is 2 PLAYER FIRE

TEST switch is on 370A program card.

COCKTAIL switch is on 370B program card.

SLAM switch is SL6 if used.

10. AUDIO 1 and AUDIO 2 is switch selectable on 370A program card.

Part #136001

<u>LOCATION</u>	<u>MARKING</u>	<u>SIGNATURE</u>	<u>TYPE</u>	<u>PERSONALITY BOARD</u>
D1	207	2H71	2516	2716/I24
E1	208	4530	2516	2716/I24
F/H1	209	96CP	2516	2716/I24
J1	210	2P8H	2516	2716/I24
F7	211	UFOH	2516	2716/I24
H/J7	212	U2C7	2516	2716/I24
P4	213	798F	74S287	A16