


Error numbers or letters will appear on the CRT display

Ram errors in the "G" row are indicated by numbers 1 - 8

Ram errors in the "H" row are indicated by letters A - H

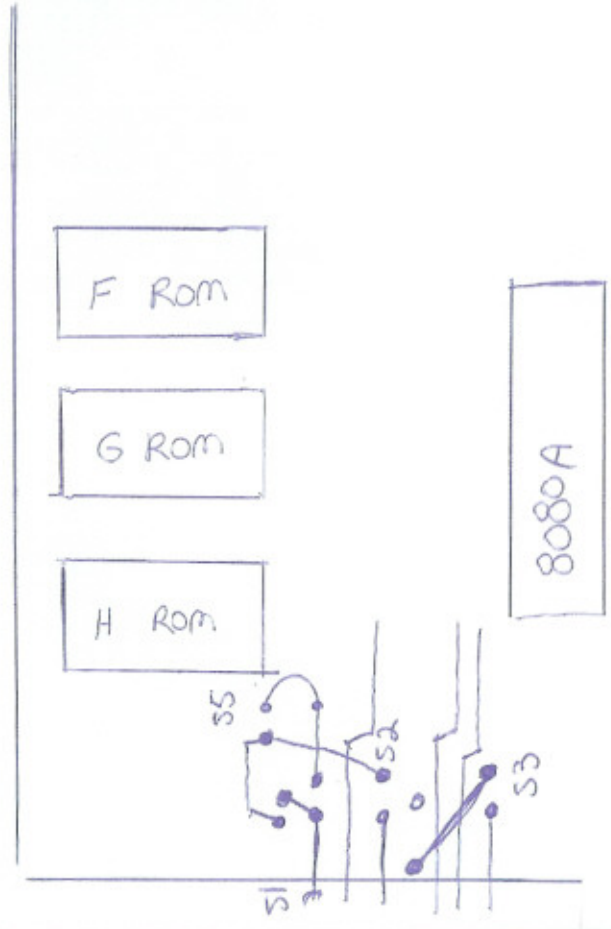

	G8	G9	G10	G11	G12	G13	G14	G15
	1	2	3	4	5	6	7	8
	H8	H9	H10	H11	H12	H13	H14	H15
	A	B	C	D	E	F	G	H